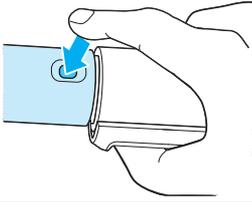
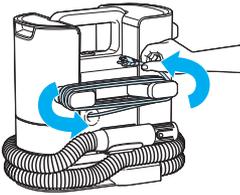
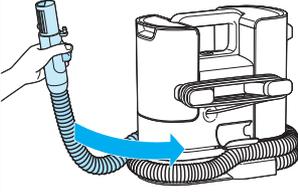


After Cleaning Care (continued)

		
<p>4. To disconnect tool, push down on button above hose grip and pull straight off. (Do NOT twist tool to remove it.)</p>	<p>5. Remove tool lens.</p>	<p>6. Rinse lens under clean, running water. Allow to dry before reinstalling.</p>

	
<p>7. When finished using the product, wrap cord and hose for storage. Store indoors in a dry location where product is not likely to get damaged.</p>	

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

Warranty

Limited 3-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

NOTICE: To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result. Store machine in protected, dry area at room temperature (40°F - 104°F).