



KIPOZI

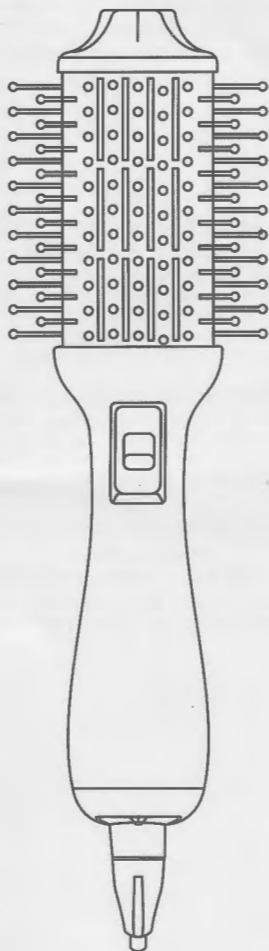

HY-033

4 in 1 Hair Dryer and Volumizer USER MANUAL

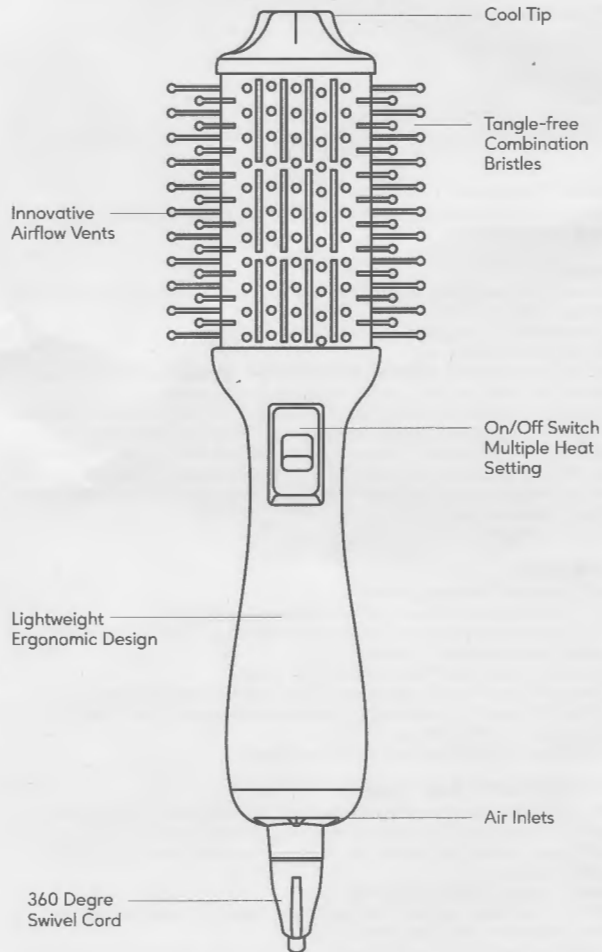

Specifications

Rated Voltage	120V
Frequency	50/60Hz
Power Rating	1000W
Cord Length	6ft
Heat Setting	LOW/MIDDLE/HIGH
Ceramic Brush Head Size	4.48x2.43x1.72 Inches
Pouch Size	16x6.7-Inches
Product Size	14.2x4.33x3.54 Inches
Product Net Weight	1.13 Pounds

Product Includes

Hair Dryer Brush *1

Cleaning Clip *1

Pouch *1

User Manual *1

Safety Instruction

When using the appliance, basic safety precautions should always be followed, including the following:

DANGER :

- Brush/Bristle area will be very hot, DO NOT TOUCH THIS AREA WITH OPEN SKIN UNTIL IT COOLS DOWN.
- Always "unplug it" immediately after using.
- DO NOT use while bathing.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT use near, place in, or drop into water or other liquid.
- If the appliance falls into water, unplug it immediately. DO NOT reach into the water.
- DO NOT use an appliance with a twisted, bent or otherwise damaged cord.
- DO NOT use if any portion of this product is chipped or cracked upon visual inspection.
- DO NOT use the device if it is defective or the cord is damaged. If the device is not working properly, please first check the plug and then check that the mains electric supply is switched on.
- DO NOT tamper with it.

WARNING:

- Do not use with a voltage converter.
- The appliance should never be left unattended when plugged in.
- Close supervision is necessary when the appliance is used by or near children or individuals with certain disabilities.
- Always be careful not to scald yourself while in use.
- Only use this appliance for intended purposes described in this manual.
- Before carrying out any cleaning or maintenance, please be sure the device is unplugged and completely cooled.
- DO NOT use an extension cord with this appliance.

MAINTENANCE AND CARE :

- NEVER wrap the power cord around the appliance. Any pulling, twisting, severe folding or bending can damage the cord, especially the part connecting cable with the unit, which may rupture the cord and can cause an electrical shock or other accidents.
- NEVER operate without the rear filter.
- NEVER block the air opening of the appliance or place the appliance near or on a soft surface which may block the openings.
- NEVER use an electrical appliance that has been left outdoors or submerged in water.
- If your brush is equipped with attachments, please allow it to cool prior to removing attachments on/off the brush.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
- Periodically inspect the intake/filter screen on the back of the brush and remove debris that may have accumulated.
- A thick layer of dust built up may reduce air flow and damage the brush.
- Never use following chemicals to clean the product: thinner, gasoline alcohols, or any flammable chemicals.
- Use a soft dry cloth to clean the surface of the brush.

OPERATION INSTRUCTION

- NOTE: During first few minutes of the initial use you may notice smoke and a slight odor. This is normal and will quickly disappear.
- Start with low setting first to test the right temperature for your scalp.
 - Prior to plugging in, check the voltage on the rating label to ensure it corresponds to your local voltage .
 - The brush is equipped with three heat setting -Low/Middle/High. As a general guide, use the high speed setting for rough drying for thicker hair, and the middle setting for the finer and more precise control when styling. The low setting can be used at the end to set the style.
 - Start with hair at the back of your head and then the front hair when drying.
 - DO NOT concentrate the airflow on any one area for an extended period of time.

WARRANTY POLICY INSTRUCTIONS:

Products are manufactured to the highest standards and will provide you with superior performance when used in accordance with the instructions in this manual. As our products comes with 1-year warranty, if any problems, please feel free to contact us. We will reply you upon receiving your emails or calls.

IMPORTANT MESSAGE TO CONSUMERS THIS MESSAGE ABOUT GROUND FAULT CIRCUIT INTERRUPTERS CAN SAVE A LIFE



IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrical can help you decide which type is best for you: a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician.

The National Electrical Code now requires GFCI in the bathroom,garage and outdoor outlets of all the new homes.

WHY DO YOU NEED A GFCI?

Electricity and water do not mix. If your hair dryer falls in water while it is plugged in, the electric shock can kill you...even if the switch is "off"
A regular fuse or circuit breaker won't protect you under circumstances.
A GFCI offers you far greater protection.

A GFCI CAN SAVE YOUR LIFE! COMPARED TO THAT, THE PRICE IS SMALL DO NOT WAIT...INSTALL ONE NOW !

*GFCI(Ground Fault Circuit Interrupter) is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

FOR ANY QUESTION PLEASE CONTACT US AT:



FACEBOOK : KIPOZI/BEAUTY



WEBSITE : WWW.KIPOZI.COM



CONTACT : SUPPORT@KIPOZI.COM



TEL: 1-214-315-8209