



DTLAPY116-1

USER GUIDE

11.6" Convertible Touchscreen Laptop



Review this manual before operating your Direkt-Tek laptop and keep it for future reference.

Introduction and Table of Contents

TABLE OF CONTENTS	Page
1.0 Introduction.....	1
1.1 Overview	2
2.0 Appearance and Buttons.....	3
2.1 Introduction to Desktop.....	4
2.2 Windows Start Menu	4
2.3 Introduction to App Interface	4
3.0 Basic Operations.....	6
3.1 Sleep, Restart and Shut Down	6
3.2 Recovery.....	6
3.3 Bluetooth.....	7
3.4 Security Management	8
4.0 Specifications.....	9

1.0 INTRODUCTION

This User Guide is designed to guide you through the key functions and features of your new laptop. Please read carefully to ensure an optimal user experience and keep it handy for future reference.

NOTE:

To change from English language prompts to Spanish language prompts, please go to “Control Panel,” then to “Clock, Language and Region,” and then to “Language” to change from English to Spanish.

Overview and Notes

1.1 OVERVIEW


The new Direkt-Tek 11.6" Convertible Touchscreen Laptop (DTLAPY-116-1) features Windows 10, HD resolution screen of 1920 x 1080 and boasts a Intel® Celeron® Processor N3350 with 2M Cache and up to 2.4 GHz. With the Convertible Touchscreen Laptop you can access the web, news, local business information and the Windows Store, where you can download your favorite apps, games, movies and more! With the built-in Bluetooth function you can seamlessly pair your Convertible Touchscreen Laptop with any Bluetooth compatible devices.

NOTES

- The Convertible Touchscreen Laptop is a high-density electronic product. DO NOT attempt to disassemble the device.
- Please do not drop or bang the device.
- Avoid using this product in the following environments: Extremely hot or cold places, high humidity, dusty areas, direct sunlight or long-term exposure to the sun.
- The product may be cleaned with a damp cotton cloth; the use of any chemical cleaning fluid is prohibited. Please keep the product away from water at all times.
- If you use headphones, DO NOT use them while crossing the street, riding a bicycle or driving a motorcycle.
- Please use approved battery, battery charger and accessories only. The use of any other type of products would be a breach of warranty and may be dangerous.
- If you have any questions regarding the use of this product, please contact your local dealer or contact Direkt-Tek customer service center directly at CustomerService@direkt-tek.com or call (888) 999-1675.
- Direkt-Tek will not be held responsible for any files lost due to product damage, repair or other causes. Please be sure to follow instructions in the User Guide and backup your files in a timely manner.

Appearance and Buttons

2.0 APPEARANCE AND BUTTONS

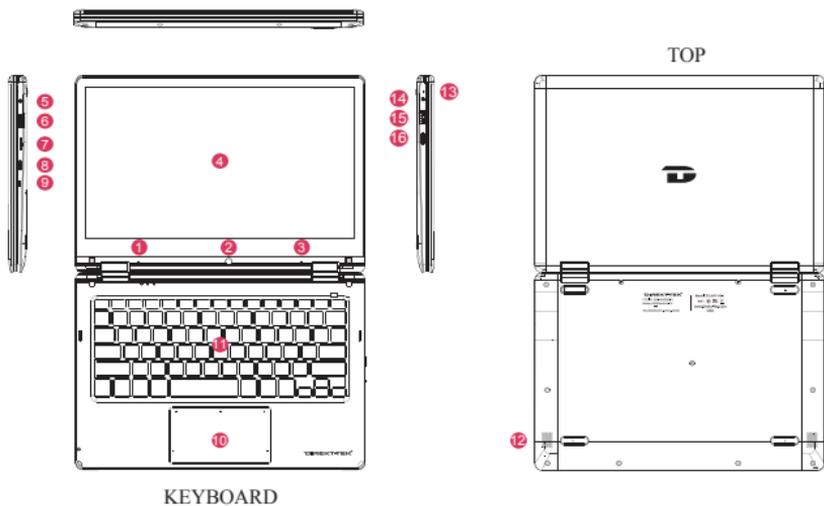

- ① Microphone
- ② Camera
- ③ Microphone
- ④ Touch Screen
- ⑤ Earphone
- ⑥ USB
- ⑦ TF Card
- ⑧ Power
- ⑨ Keyboard Lock
- ⑩ Touchpad
- ⑪ Keyboard
- ⑫ Speaker
- ⑬ Charge Light
- ⑭ DC IN
- ⑮ USB
- ⑯ Mini HDMI

Introduction to Desktop

2.1 INTRODUCTION TO THE DESKTOP

You must log on to your Microsoft account before the start up application can run.

2.2 WINDOWS START MENU

Press the key **Windows** on the keyboard or click the icon **Windows** on the screen until you see the Start Menu. All applications/programs are displayed in the form of “magnets” listed on the screen. Click on any of the icons to open.




2.3 INTRODUCTION TO APP INTERFACE

If you want to pin more application programs on the Start interface, press and hold the application program for about one second, and release the magnet until the pop-up option appears and select “Pin to Start” to fix to the start screen, or just press and move to the start screen. (Screen 1).

Introduction to Desktop (Cont'd)



(Screen 1)

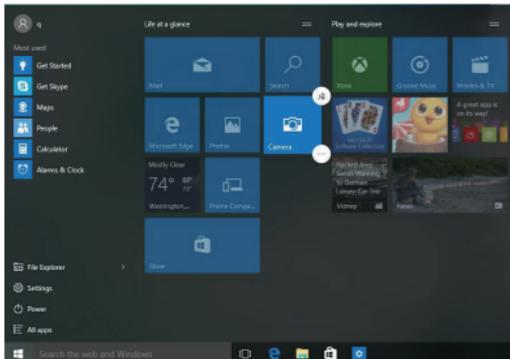

(Screen 2)

Conversely, if you want to cancel or delete a certain application in the Start screen, press and hold the application program magnet for about one second and click . You can also click  to check more menu options, such as resizing the magnet you want. (Screen 2) Slide it to the left from the right side of the screen to start Action Center to check the laptop status: Rotation lock, Bluetooth, Brightness, etc.

Basic Operations

3.0 BASIC OPERATIONS

3.1 Sleep, Restart and Shutdown



Force Reset / Shutdown

If the laptop freezes, you can press and hold the Power button for 8–12 seconds, then the laptop will shutdown.



3.2 RECOVERY

Follow the steps below

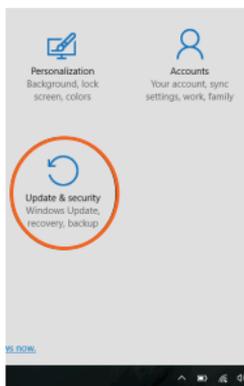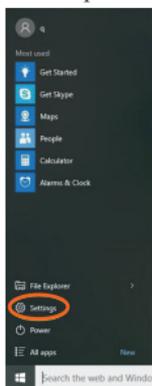

Click the  button in the lower left corner of screen and select “**Settings**” then select “**Update & Security**”, click on “**Recovery**”. The program will walk you through simple steps necessary to recover your system.


Basic Operations (Cont'd)

3.3 BLUETOOTH

- Click the  button in the lower left corner of screen.
 - Select “Settings”
 - Select “Devices”, click on “Bluetooth”.
- a) Make sure the Bluetooth switch is set to “On”
After you turn on Bluetooth, the laptop will auto-search other devices you can pair with your device.

Send or Receive Files via Bluetooth

- b) Send a File: Before sending files, you should open the window, "Select where to send your files": Click the icon  at lower right corner of desktop -  - Send a File.
- c) Receive a File: Before receiving the files, you should open the window "Waiting for a connection": Click the icon  at lower right corner of desktop -  - Receive a File.

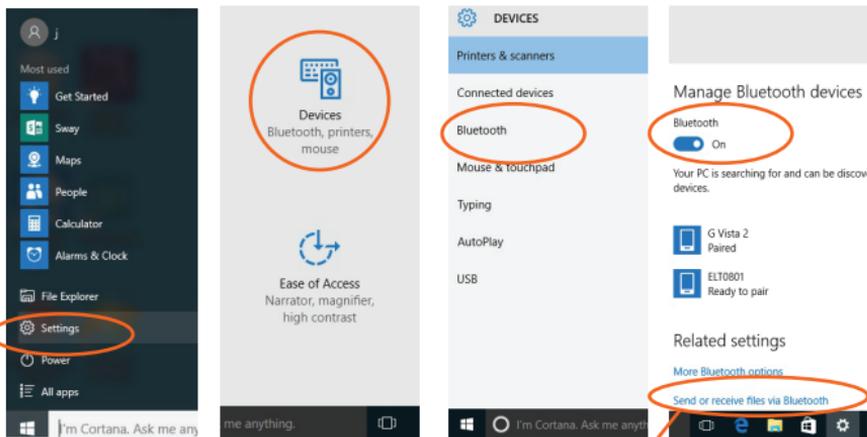

Send or Receive Files via Bluetooth






Basic Operations (Cont'd)

3.4 SECURITY MANAGEMENT

Method for quick setup:

Click the  button in the lower left corner of screen and select “Settings”. Select “Accounts” on the right and click “Create local account” in “Your account” on the right side. After creating a user name and a password for Windows Live ID Account, input username, password, confirm password and password prompt.

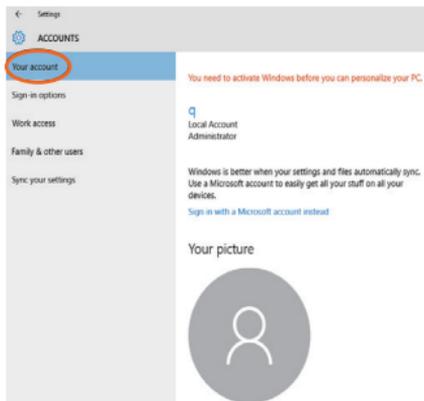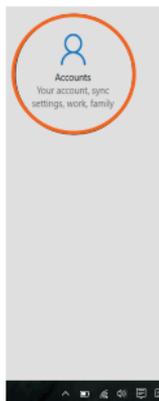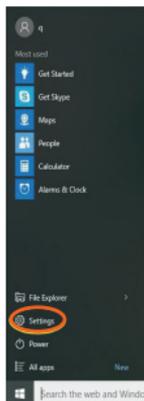

Specifications

System Standard Configuration		
Product Form	Form Factor	Convertible 2in1
	Dimensions	277.5*188.8*18.2mm
	Weight	1.04KG
LCD	Screen Size	11.6
	Screen Resolution	1920*1080 IPS
TP	Touch Module	G+G
Battery	Type	Lithium-ion polymer battery 3.8v
	Capacity	9300MAH
	Working Time	6-8 hours
System Hardware Configuration		
CPU	Type	Cherry Trail Z8350
	Speed	1.44GHz-1.92GHz
GPU	Type	Intel HD Graphics 400
Memory	Capacity	LPDDR3 4G
Storage	Capacity	eMMC 32GB
Camera	Front	2.0M
	Rear	N/A
Speaker	Built-in	Built-in stereo speakers 8R/1.0W*4
G-Sensor	Built-in	G-sensor 3 axsi
Network Connections		
WIFI	WIFI Module	RTL8723BS 802.11b/g/n
Bluetooth	BT Module	Bluetooth4.0
Ethernet Network	External Dongle	Supportive
Interface		
Memory Card Slot	External Memory	1x Micro SD card up to 64GB
USB Interface	Support Data Transfer	Support USB3.0*1+USB2.0*1
Headphone Jack	Music Output	3.5mm standard headphone jack
HDMI Interface	Video Output	Mini HDMI Type D
Keyboard	Input Device	Hard Keyboard
Main Accessories		
Adapter	Standard Configuration	DC 5V/3A
Main Accessories		
OS	Windows	Windows10

