


comfortable, turn the Thermostat Switch counter-clockwise slowly to the minimal position until the appliance stops running.

The Thermostat Switch will keep the room at your desired temperature automatically. You can also turn the Thermostat Switch counter-clockwise to the minimum position to the lower temperature. If turned clockwise to maximum position, the temperature will be higher.

CLEANING & MAINTENANCE

1. Before you turn off the appliance, turn the Heat/Fan Select Switch to the  position for 1 to 2 minutes to lower the internal temperature of the heater, then turn the Heat/Fan Select switch to "O" position to switch it "off".
2. Before you clean the appliance, turn off the heater first then remove the plug from the socket and wait until the appliance cools down
3. Clean the air inlet and outlet of the appliance regularly (at least twice a year normally).
4. Use a dry cloth to clean the heater's surface and dry the appliance before using or storing.

WARRANTY

Length of Warranty

1 year from date of purchase

Within 1 year from date of purchase,

- 1) Return product to place of purchase (if your dealer allows)

OR

- 2) Send product postage pre-paid to:

I.E.A.C.

3030 East Vernon Avenue

Vernon, California, USA 90058

Please include original dated receipt, explanation of defect and return name and address as well as a contact phone number.

We will, within 10 days of receiving your product, return a new or refurbished (at our discretion) product at NO ADDITIONAL CHARGE.

We will also return your receipt. If product is found to be in working condition, we will return product postage collect.

PACK YOUR PRODUCT WELL!

We will not be responsible for damages incurred as a result of improper packing.