bentgo kidschill

User's Manual



Thank you for purchasing Bentgo Kids Chill! This leak-proof lunch-packing system is designed exclusively for children ages 3-7. It offers 4 different compartments, all perfectly sized for a child's appetite, plus an optional ice pack to keep food cool longer. It's the perfect solution for packing a healthy, balanced lunch for school, a picnic, or any fun family outing.

Features

- 4 leak-proof compartments
- Dishwasher and microwave safe food tray
- Freezer safe lunch box with removable ice pack
- Rubberized edges for maximum durability
- Food-grade safe and eco-friendly materials
- No BPA, PVC, phthalates, lead, or vinyl

Using Your Bentgo Kids Chill

- 1. Lift the locking clip on the front of the lunch box to open.
- 2. Remove the food tray and ice pack.
- 3. Place the ice pack in the freezer until ready to use.
- Fill the food tray with your child's favorite foods. Do not overfill.
- To store overnight, place the food tray inside the outer box and put in the refrigerator until you're ready to travel.
- 6. When it's time to go, add the frozen ice pack to the outer box, nesting it below the food tray.
- 7. Close the lid and secure the locking clip.

NOTE: On days when it's not necessary to keep food cool, Bentgo Kids Chill can still be used as a leak-proof lunch box without the ice pack.

Special Use & Care Instructions

- · Wash before initial use.
- Food tray is top-shelf dishwasher safe.
- Removable ice pack and outer box should be hand washed as needed.
- Thoroughly dry all pieces before storing.
- Store the lunch box open, not sealed or closed.

NOTE: Condensation, or sweating, occurs naturally with all ice packs and is normal when using the ice pack with this lunch box.

Warnings

- Microwaving the tray is for reheating only Do not microwave for more than 3 minutes.
- To ensure mess-free opening and closing of your Bentgo Kids Chill, do not overfill compartments.
- The lunch box lid is not designed to lay flat. Do not push the lid backwards to lay it flat on a table or other surface.
 The hinges may snap if too much pressure is applied.
- To preserve the leak-proof seal on the lid, do not place the outer box in the dishwasher.

Product Warranty

Bentgo offers an industry-leading 2 Year Warranty. If you have warranty or product questions, please contact us directly at:

Email: support@bentgo.com
Phone: (657) 275-3738

(Available Monday-Friday, 8am-5pm PST)

Specifications

Container Dimensions	8.9" x 5.2" x 2"
Tray Capacity	Left Compartment: 1 1/3 cup Back Compartment: 1 cup Small Compartments: ½ cup each
Product Weight	1 lb. 7 oz.
Temperature Threshold	0° to 180° F

Materials*

Outside Shell & Locking Clip	ABS Plastic
Rubberized Overlay	TPE Thermoplastic Rubber
Food Tray	PP Plastic
Ice Pack	ABS Plastic

^{*}All materials are food-grade safe and eco-friendly

