



JUMP AND PLAY 7-FOOT TRAMPOLINE SET

PRODUCT MANUAL - MODEL# 9307TS - VERSION 2.19.1

FOR AGES:

3-9

WEIGHT LIMIT:

120 Lbs
54 Kgs

TO BUILD:



TOOLS NEEDED:

**Tools
Provided**



HOW-TO
VIDEOS ONLINE



Manual en
español ubicado
en GQBrands.com

Spanish Manual located
at GQBrands.com

CUSTOMER SERVICE

GQBrands.com • CustomerService@GQBrands.com • 1-866-498-5269 • 4401 Samuell Blvd, Ste 150, Mesquite, TX 75149



PATENT PENDING *

CUSTOMER SERVICE INFORMATION

Thank you for purchasing: JUMP AND PLAY 7-FOOT TRAMPOLINE SET

MODEL# 9307TS

Please do not return your item. Please report items that are damaged or missing parts to the manufacturer GQ Brands within 3days of delivery. Email customerservice@gqbrands.com or call toll-free at 1-866-498-5269

At GQBrands®, we want all of our customers to be completely satisfied with their purchase. Take time to review the contents of the product you have just received to make sure that all of the parts are included. If you find that any parts are missing or damaged, we will provide replacement parts at no charge within 30 days of purchase.

Please keep in mind that for select damaged part replacement requests, we will require a photo for submission.

To order these parts, or if you have any other questions or concerns about this GQBrands product, please contact us at

PureFun.Net
GQBrands®
Phone: 1-866-498-5269
Email: CustomerService@GQBrands.com
4401 Samuell Blvd, Ste 150,
Mesquite, TX 75149

Sincerely,
Customer Service

Please be sure to include the following information when you contact Customer Service:

YOUR NAME: _____

YOUR MAILING ADDRESS: _____

YOUR EMAIL ADDRESS: _____

PRODUCT NAME: _____

PRODUCT MODEL#: _____

PART NUMBER _____

RETAILER WHERE PURCHASED: _____

DATE OF PURCHASE: _____

ORDER NUMBER: *(If Available)* _____

SERIAL NUMBER: *(If Available)* _____

QUANTITY NEEDED: _____

PICTURE OF DAMAGED PART

LIMITED WARRANTY

Global Quality Brands® warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of 90 DAYS FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the company.

All warranty coverage extends only to the original retail purchaser from the date of purchase, GQ Brands obligation under this warranty is limited to replacing or repairing, at Global Quality Brands® option. All products for which a warranty claim is made must be received by Global Quality Brands® and accompanied by sufficient proof of purchase (photocopy of the original store receipt, indicating the date of purchase). All freight and handling fees are the responsibility of the consumer to pay, both to and from Global Quality Brands®. All warranty claims must be preauthorized by Global Quality Brands® pre-authorization can be obtained by calling 866-498-5269.

This warranty does not cover ordinary wear and tear, weathering, failure to follow directions, improper installation, improper maintenance, or acts of nature, (such as damage caused by wind, lightning, snow, water, or ice) weather damage, damage caused by unauthorized repair work or damage caused by improper use of the products are not covered by the product warranty. No other warranty beyond that specifically set forth above is authorized by GQBrands®.

GLOBAL QUALITY BRANDS® IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY,

THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND GLOBAL QUALITY BRANDS®, SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NO APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WHILE EVERY ATTEMPT IS MADE TO ENSURE THE HIGHEST DEGREE OF PROTECTION IN ALL EQUIPMENT, WE CANNOT GUARANTEE FREEDOM OF INJURY. THE USER ASSUMES ALL RISK OF INJURY DUE TO USE. ALL MERCHANDISE IS SOLD ON THIS CONDITION, WHICH NO REPRESENTATIVE OF GQBRANDS® CAN WAIVE OR CHANGE.



WARNINGS



ADULT ASSEMBLY REQUIRED **CHOKING HAZARD - Small Parts** **NOT for children under 3 years of age.**

 
Please read these warnings and the information in this manual in its entirety.

Failure to comply with the following instructions may increase the risk of serious injury and/or death:

- DO NOT allow children under the age of 3 to handle or use chalk pieces. Broken chalk or chalk remnants present a choking hazard and serious injury or death may occur.
- This unit must be assembled and disassembled by ADULTS ONLY.
- This Trampoline is suitable for use by most children 3-9 YEARS OF AGE.
- DO NOT exceed the MAXIMUM WEIGHT limit of 120 lbs (54kgs) regardless of age.
- FOR HOME USE ONLY: This Trampoline is designed for family residential use. It is NOT intended for use in commercial applications and/or use in public areas such as schools, parks, nurseries, day schools, day cares, etc.
- ALWAYS locate this equipment on a stable, level surface AT LEAST 7 feet away from any structure, obstruction, or possible hazard(s) such as walls, pools, power lines, overhangs, other playground equipment, driveways, hard surfaces and/or roadways.
- Children must be supervised at all times when using this equipment. DO NOT leave children unattended at any time.
- DO NOT attach items to the trampoline not specifically designed for this purpose. Especially in the case of jump ropes, chains, clotheslines, pet leashes and cables. These may cause a strangulation or physical hazard.
- This Trampoline is NOT for adult or adolescent use.
- DO NOT allow more than one child to jump on the Trampoline at any time.
- DO NOT allow children to wear glasses or helmets when using the Trampoline.
- DO NOT allow the padding cover of this trampoline to become wet. If accidental spillage occurs, immediately blot this with a damp towel and allow to dry.
- DO NOT place objects on or under the trampoline, or allow people and pets to stand or sit on, near or under the unit.
- Remove all hard or sharp objects including jewelry, eyeglasses, sunglasses or hair clips before jumping.
- Do not attempt or allow somersaults. Landing on the head or neck can cause serious injury, paralysis, or death, even when landing in the middle of the mat.
- Do not use if in a cast or have previous leg, arm, head, neck or back injury.
- ALWAYS secure the Trampoline against unauthorized and unsupervised use.
- Inspect legs for proper attachment or cracks, netting for tears and sagging, loose or damaged springs, mat for tears or worn stitching, and frame for sagging or cracks before use.
- The product must not be used in windy conditions as wind can cause unexpected movement of the product. Wind can cause the trampoline to be lifted off the ground and become airborne. This can present a danger to individuals and to property. Winds can be especially strong in open areas, foothills, mountains, locations subject to hurricanes and tornadoes, areas between homes that create wind tunnels and anywhere else where local weather conditions can create high winds.
- We recommend that you anchor the trampoline or otherwise secure the trampoline to prevent it from moving as a result of the wind.
- If the winds are anticipated to be very strong, the trampoline should be disassembled and stored away safely until the weather conditions improve.
- Only genuine replacement parts sold through our authorized dealer are recommended. Replacement parts from other sources may not have been designed, tested or manufactured to standards. Because of this, cannot guarantee the performance and safety of the product when non genuine replacement parts are used. The use of non-genuine replacement parts may affect any warranty claim on the product, as allowed by the law in your jurisdiction.

PARTS LIST


1 - Jump Mat and Frame Pad

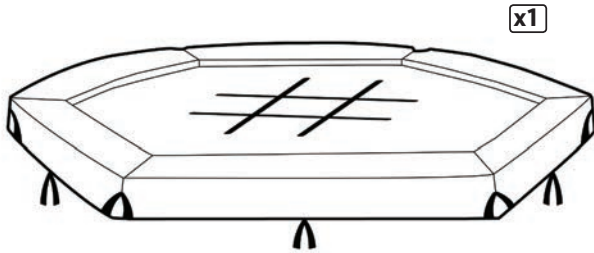

2 - Top Rail



 
3 - Corner Top Rail with Socket

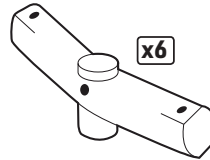


4 - Vertical Leg Extension



 
5A - Plastic Vertical Leg Extension

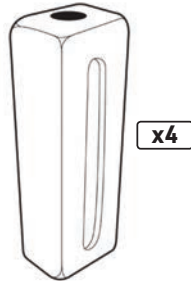

 
5B - Plastic Vertical Leg Extension-Abacus

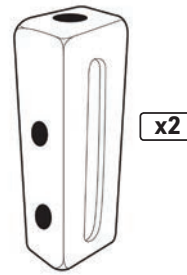

6 - Plastic Horizontal Leg Base

 

7 - Galvanized Spring

 

8 - Straight Enclosure Pole



 
8A - Straight Pole Foam




9 - Curved Enclosure Pole




9A - Curved Pole Foam



10 - Arc Top Enclosure Rail

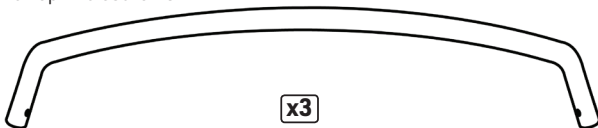 


10A - Arc Foam

 







x10



Three vertical cylinders are shown, representing the multiplication $3 \times 1 = 3$. A small box with the text "x1" is next to them.



x14



A diagram showing a line segment labeled 'x2'.



x12



x12



x12



A diagram showing a circle with a shaded sector. The label **x12** is next to it.

ASSEMBLY INSTRUCTIONS

STEP 1

20- M8 Nut

 
 


21- Flat Washer




Tighten to the metal rod the hardware shown to ensure it doesn't escape.

Insert the Metal Rod (22) from the larger TOP opening of the Plastic Vertical Leg Extension (5B) for the Abacus.

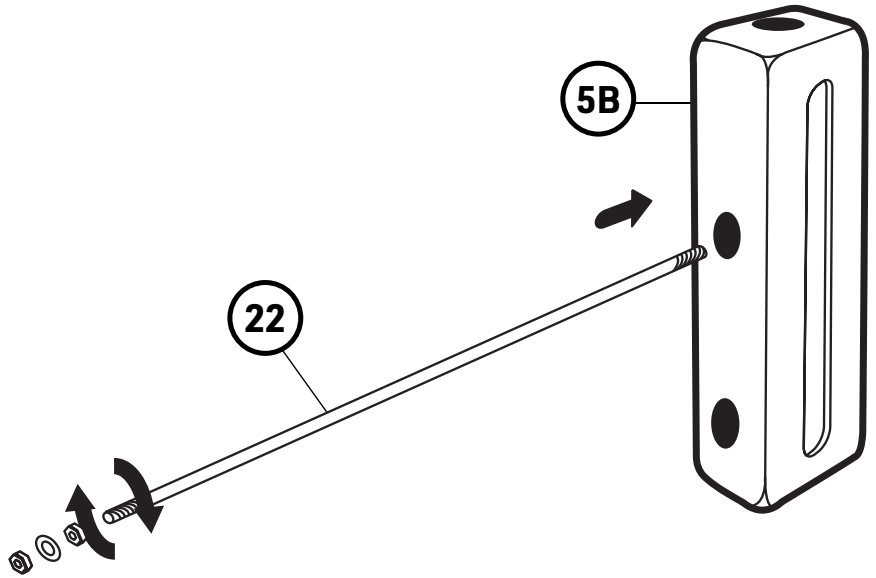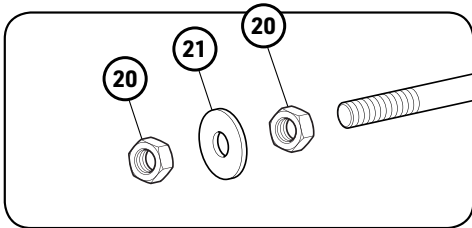


STEP 2

 23- Red Abacus Ball




24- Blue Abacus Ball

 

Slide 12x Red Abacus Balls (23) through the Metal Rod, and then slide 12x Blue Abacus Balls (24)

 NOTE: You may choose which colors go first between all 4 colors provided.

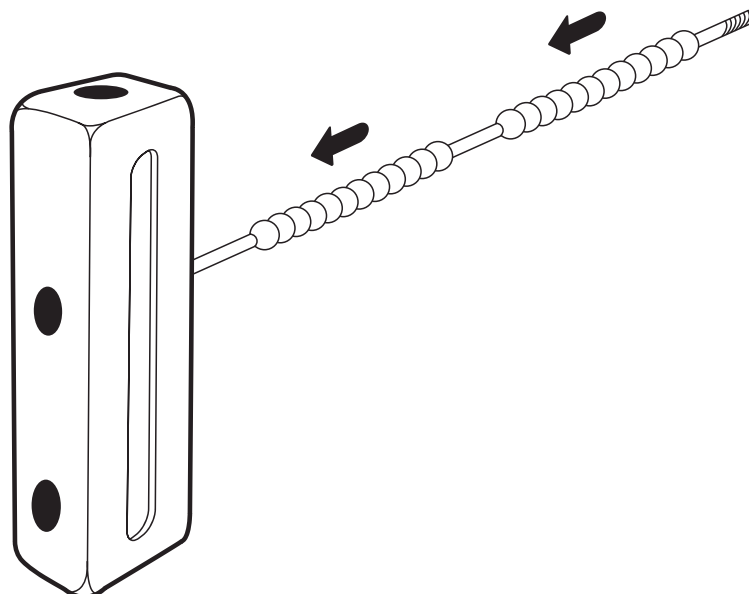

ASSEMBLY INSTRUCTIONS

STEP 3

 
 
 
20- M8 Nut



21- Flat Washer



Push the Vertical Leg Extension towards the Abacus balls to be able to secure the Metal Rod using the hardware provided.

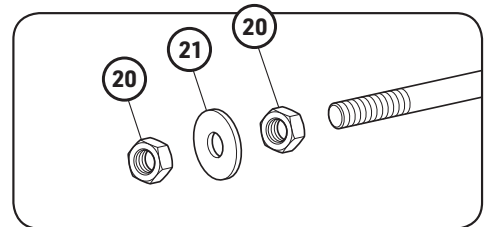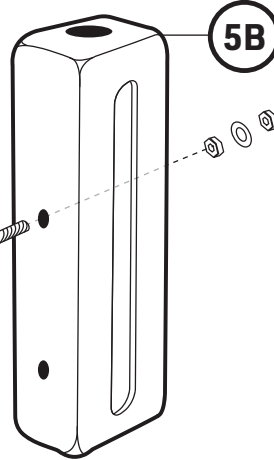
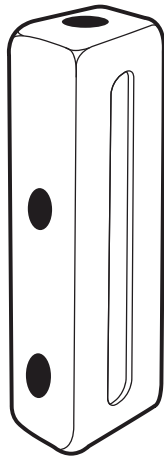


STEP 4

12- Plastic Flat Plate



  Using 2 Abacus Flat Caps (12), place 1 on each side of the Leg Extension to avoid the metal rod from escaping.

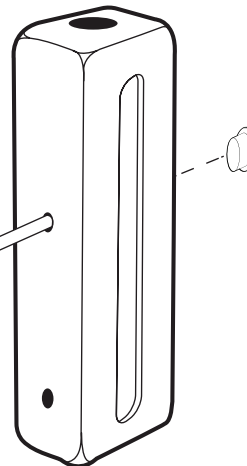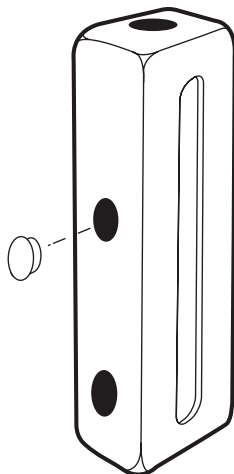

ASSEMBLY INSTRUCTIONS

STEP 5

20- M8 Nut

 


21- Flat Washer




Tighten to the metal rod the hardware shown to ensure it doesn't escape.

Insert the Metal Rod (22) from the larger BOTTOM opening of the Plastic Vertical Leg Extension (5B) for the Abacus.

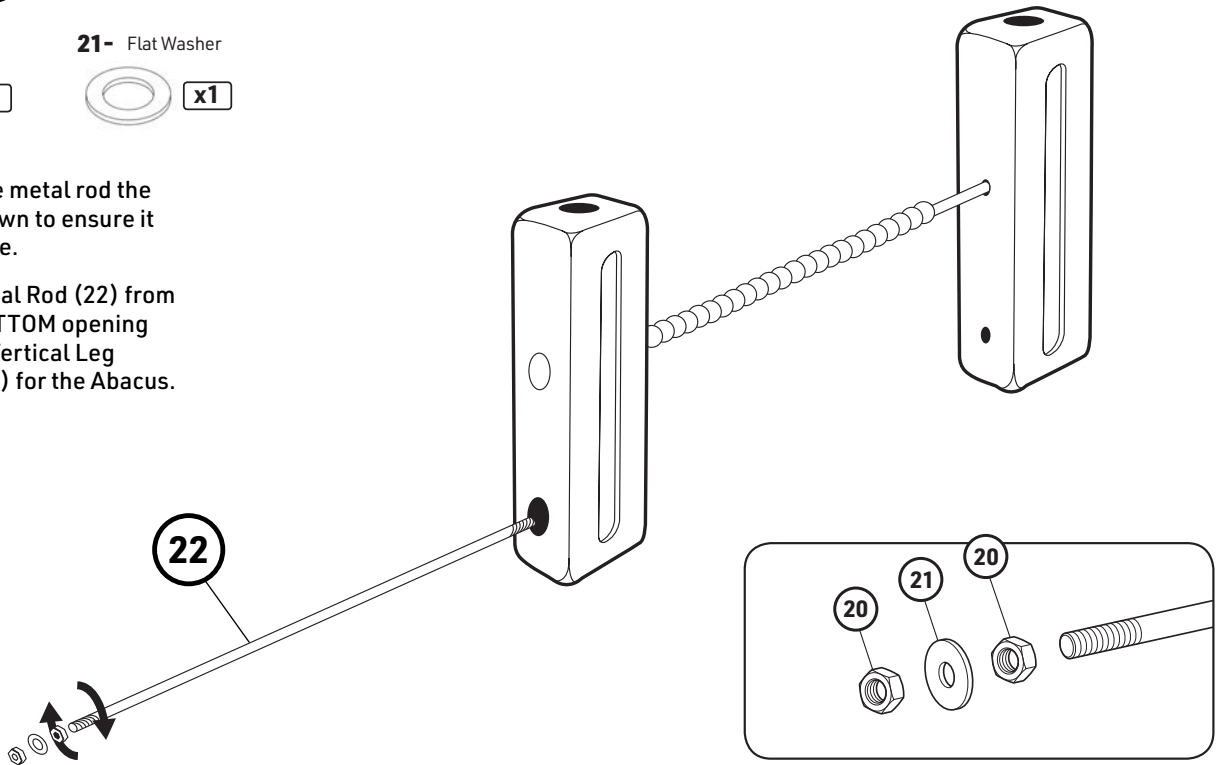

STEP 6

 25- Green Abacus Ball




26- Yellow Abacus Ball



Slide 12x Green Abacus Balls (25) through the Metal Rod, and then slide 12x Yellow Abacus Balls (26)

 NOTE: You may choose which colors go first between all 4 colors provided.

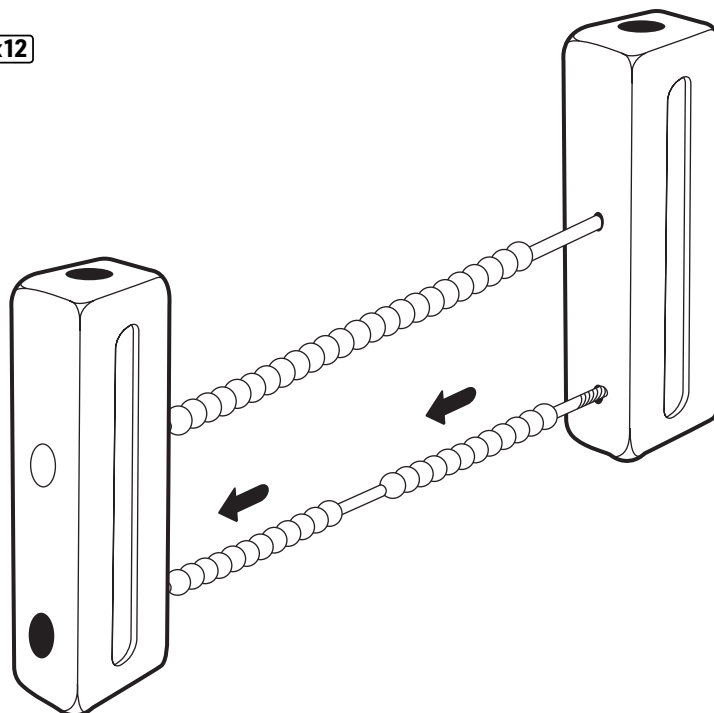

ASSEMBLY INSTRUCTIONS

STEP 7

 
20- M8 Nut



21- Flat Washer




Push the Vertical Leg Extension towards the Abacus balls to be able to secure the Metal Rod using the hardware provided.

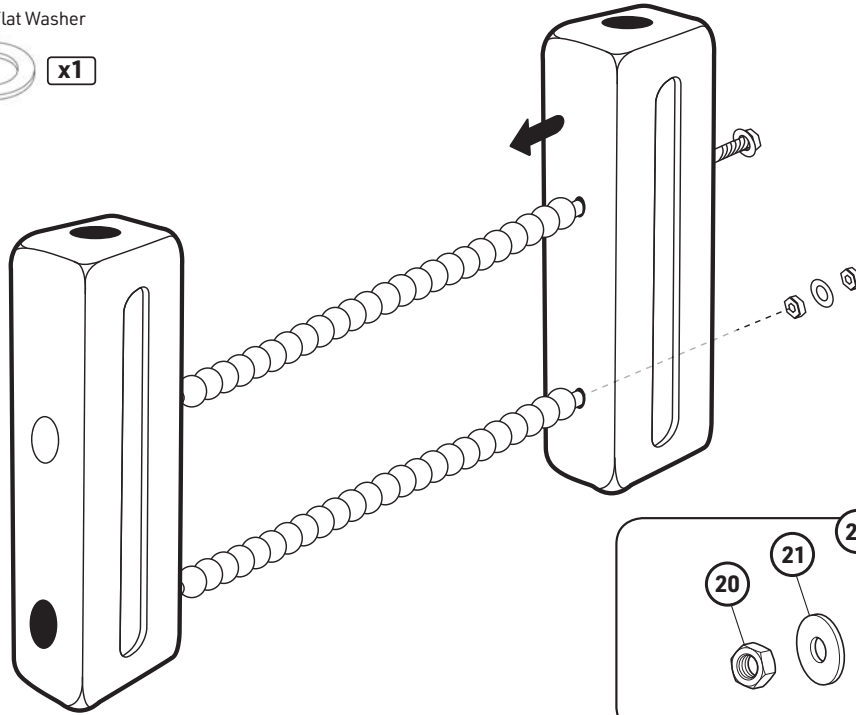


STEP 8

 12- Plastic Flat Plate




 Using 2 Abacus Flat Caps (12), place 1 on each side of the Leg Extension to avoid the metal rod from escaping.

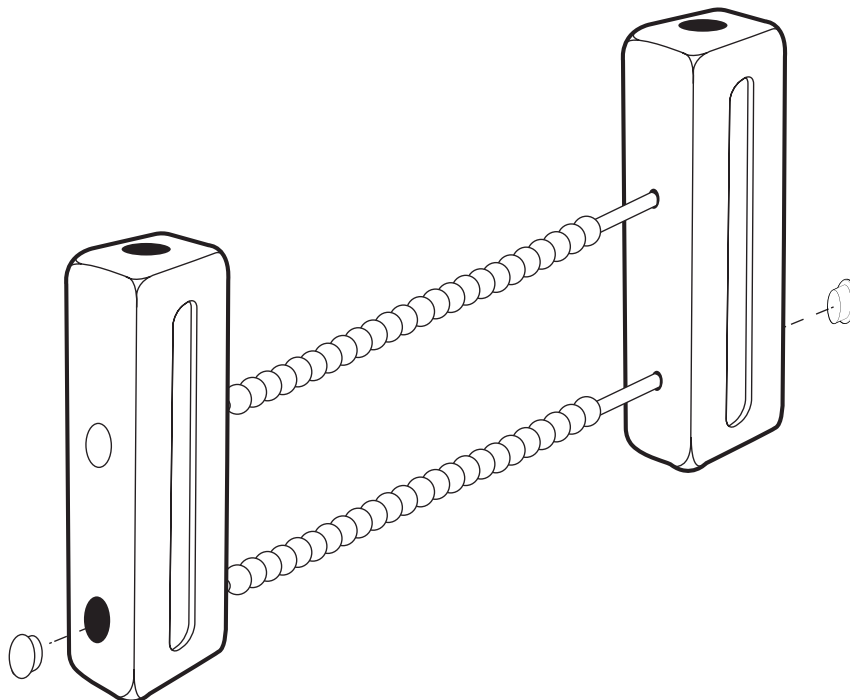


ASSEMBLY INSTRUCTIONS

 STEP 9

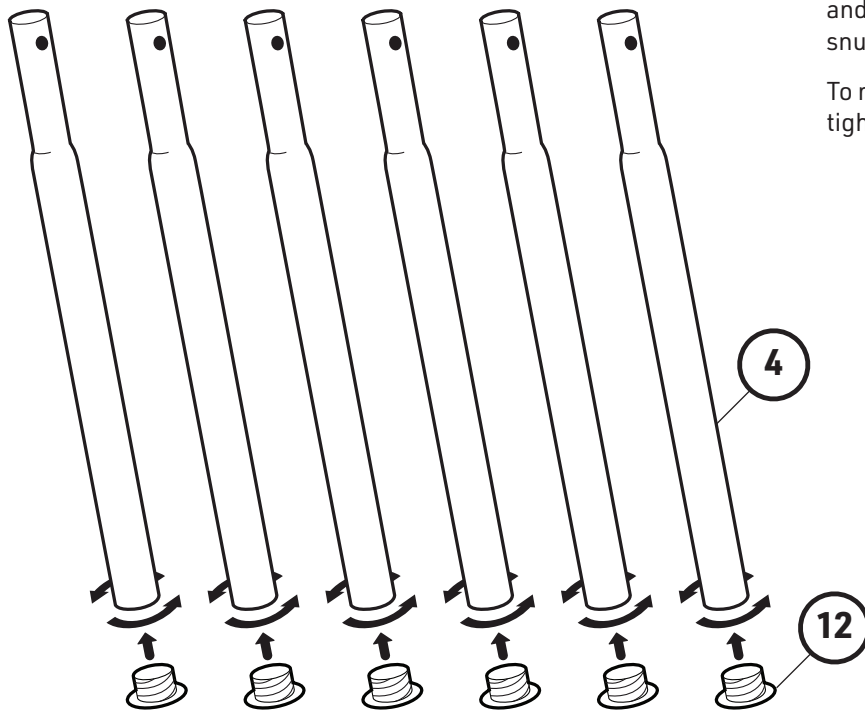


Locate all the Vertical Leg Extensions (4) and twist the Plastic Flat Plates (12) until snug.

 To make sure they are secure and properly tightened, use the Allen wrench provided.

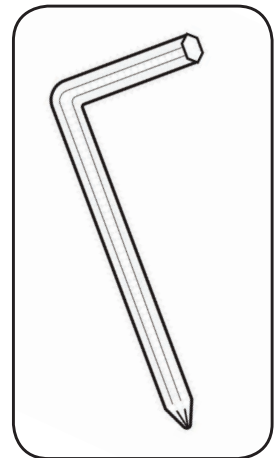

 STEP 10

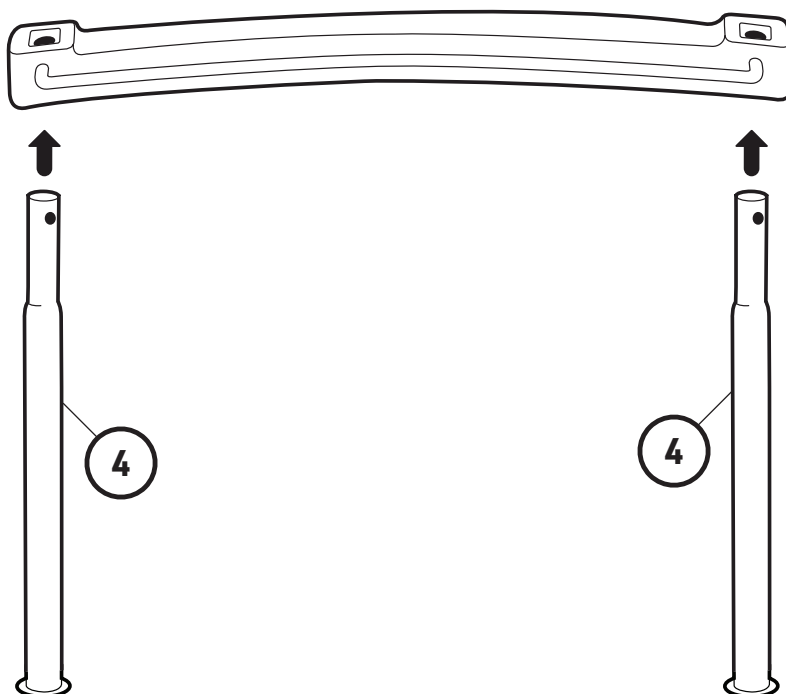


Insert the 2x Vertical Leg Extensions at both openings of the Plastic Horizontal Leg Base (6).

The flat area of the Horizontal Base must face the floor. Both indents in the Base must be facing upwards.

ASSEMBLY INSTRUCTIONS

 STEP 11


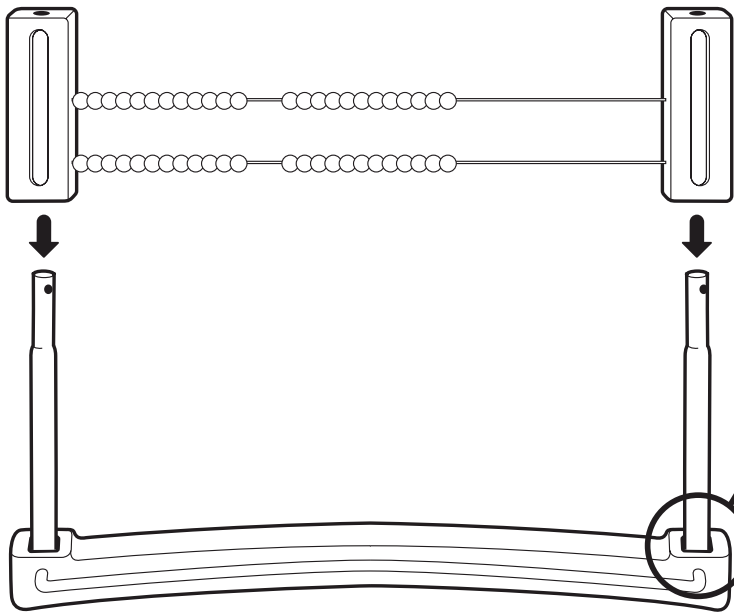


Slide the completed Abacus into the Vertical Leg Extensions with the bottom portion closest to the Horizontal Leg Base

The emboss indent at the bottom of the legs will align to the openings of the Horizontal Leg Base.


STEP 12

  Spring holes must be facing upward

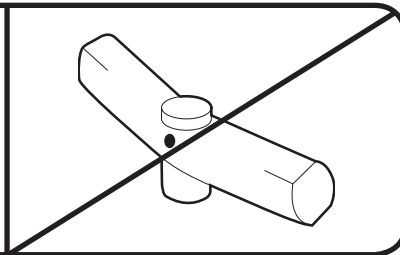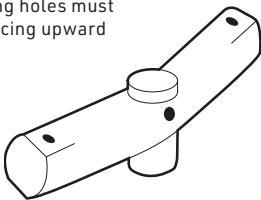

Slide 2x Corner Top Rail with Socket (Part 3) and align to the upper opening of the Vertical Leg Extensions.

 NOTE: Make sure that you locate the upper openings of the corner arms and they are facing upwards.

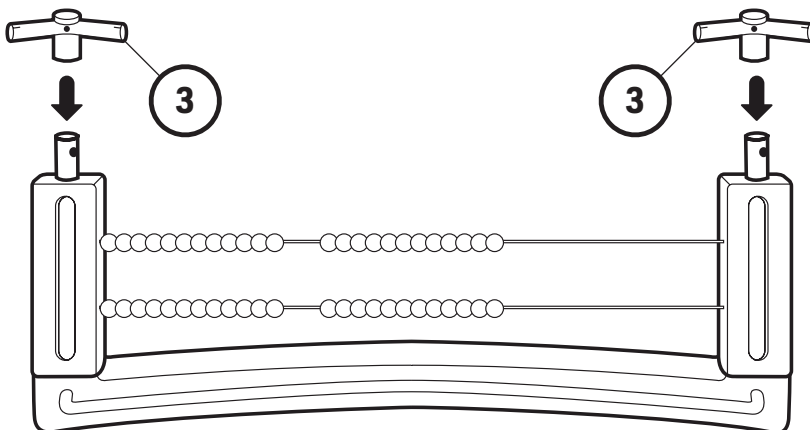


ASSEMBLY INSTRUCTIONS

STEP 13


The Straight Enclosure Poles should have Foam (8A) already pre-installed.

Slide into the corner Top Rails from the upper opening, and slide the Top Rail to the arms of the corners.

 NOTE: Just like the Corners, the openings of the Top Rails must be facing upwards for the springs to be installed

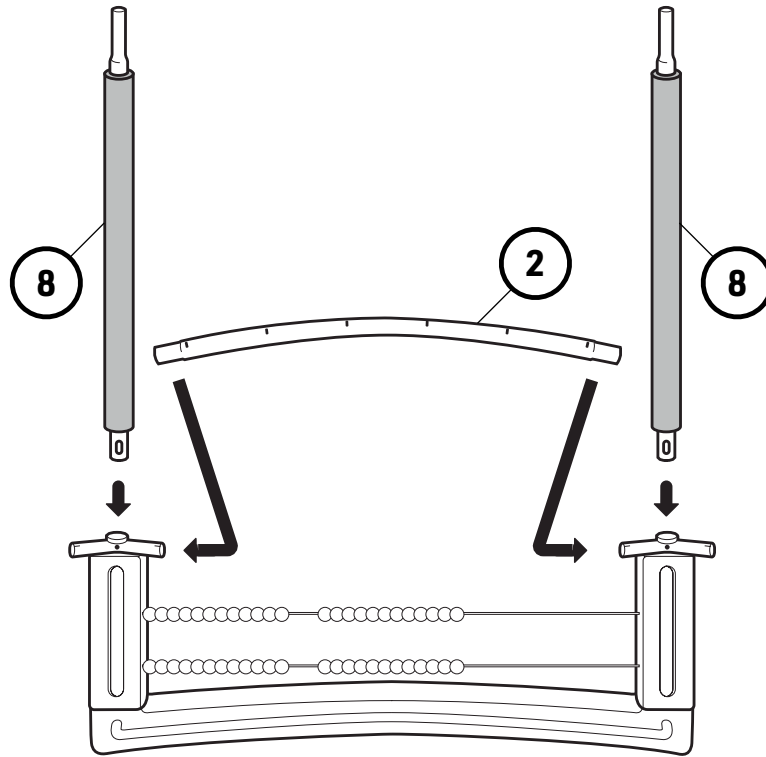

 
STEP 14

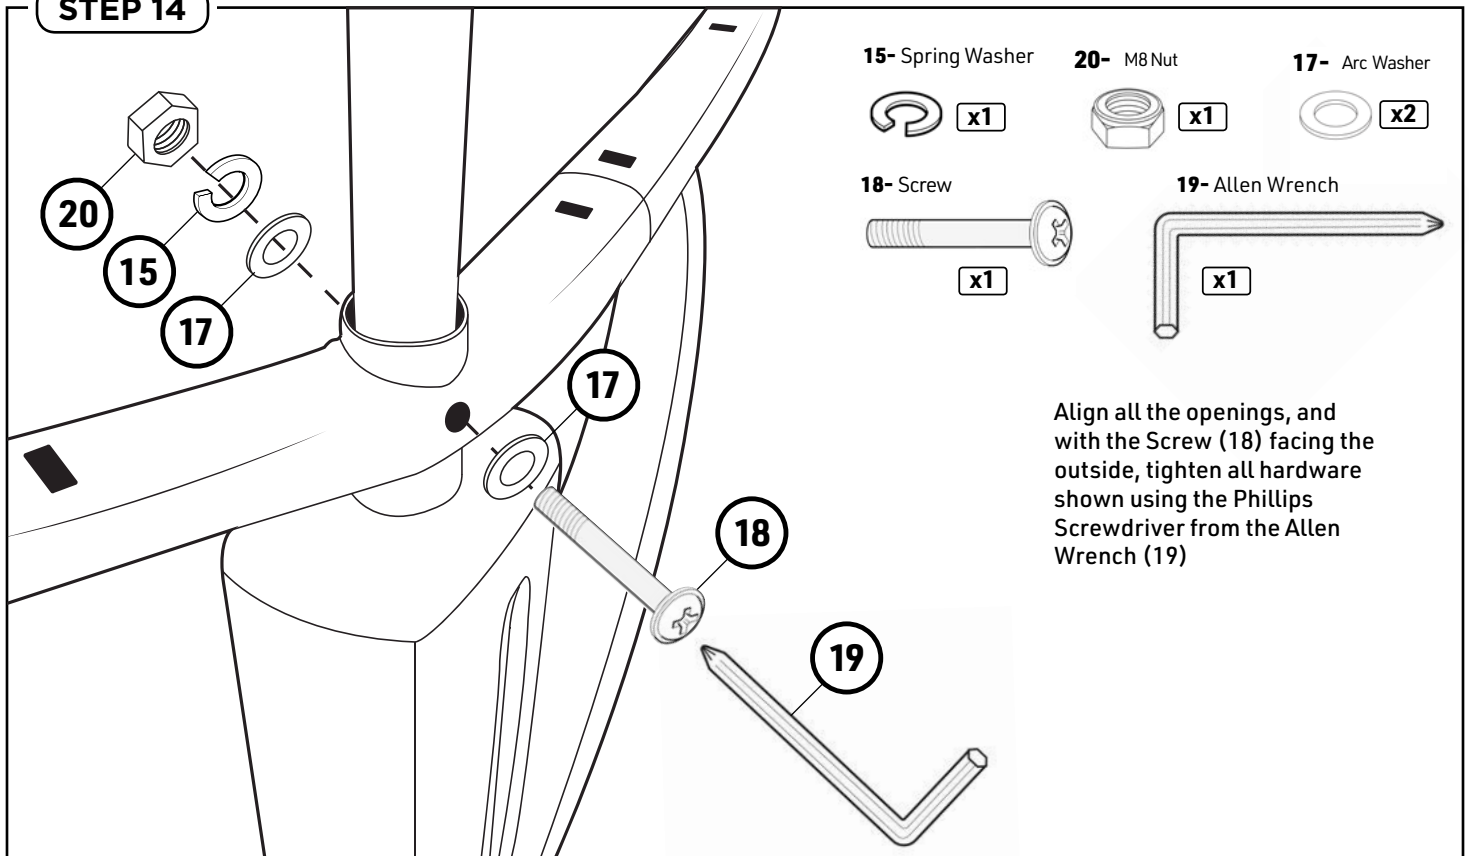


ASSEMBLY INSTRUCTIONS

STEP 15

 Complete two more
assembled legs

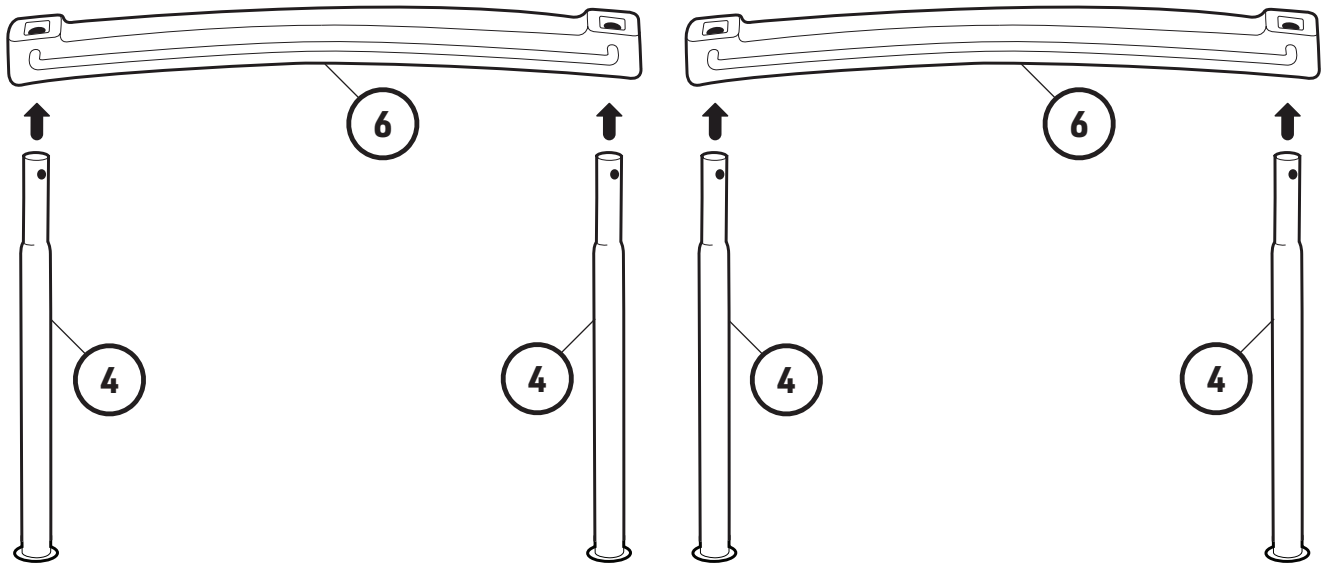


 STEP 16

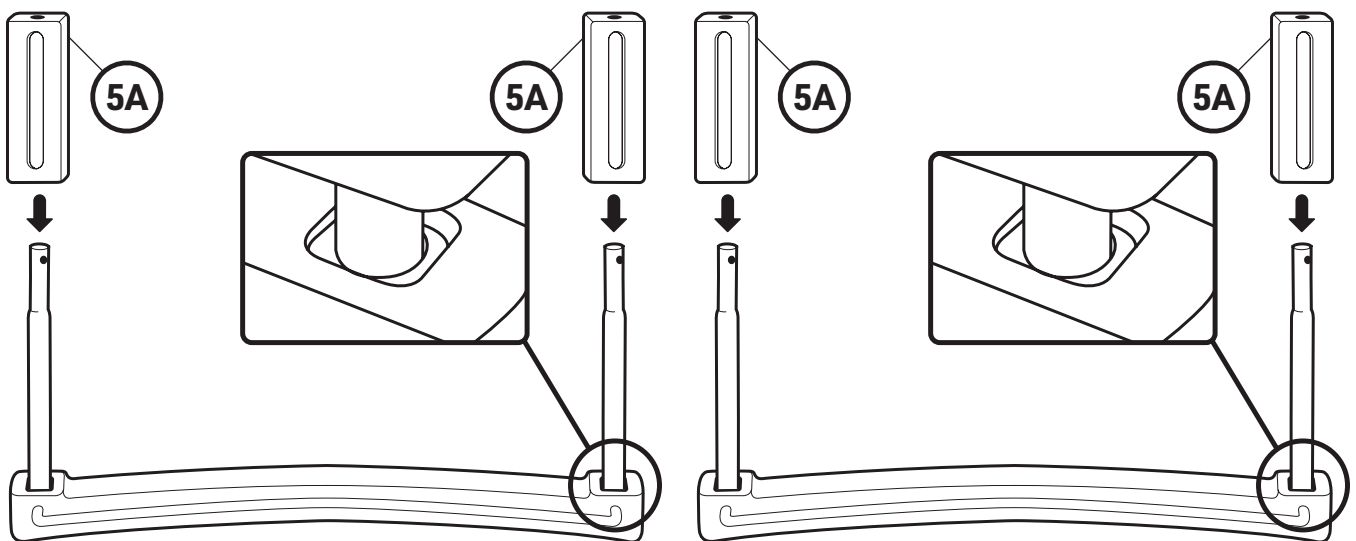


ASSEMBLY INSTRUCTIONS

 STEP 17

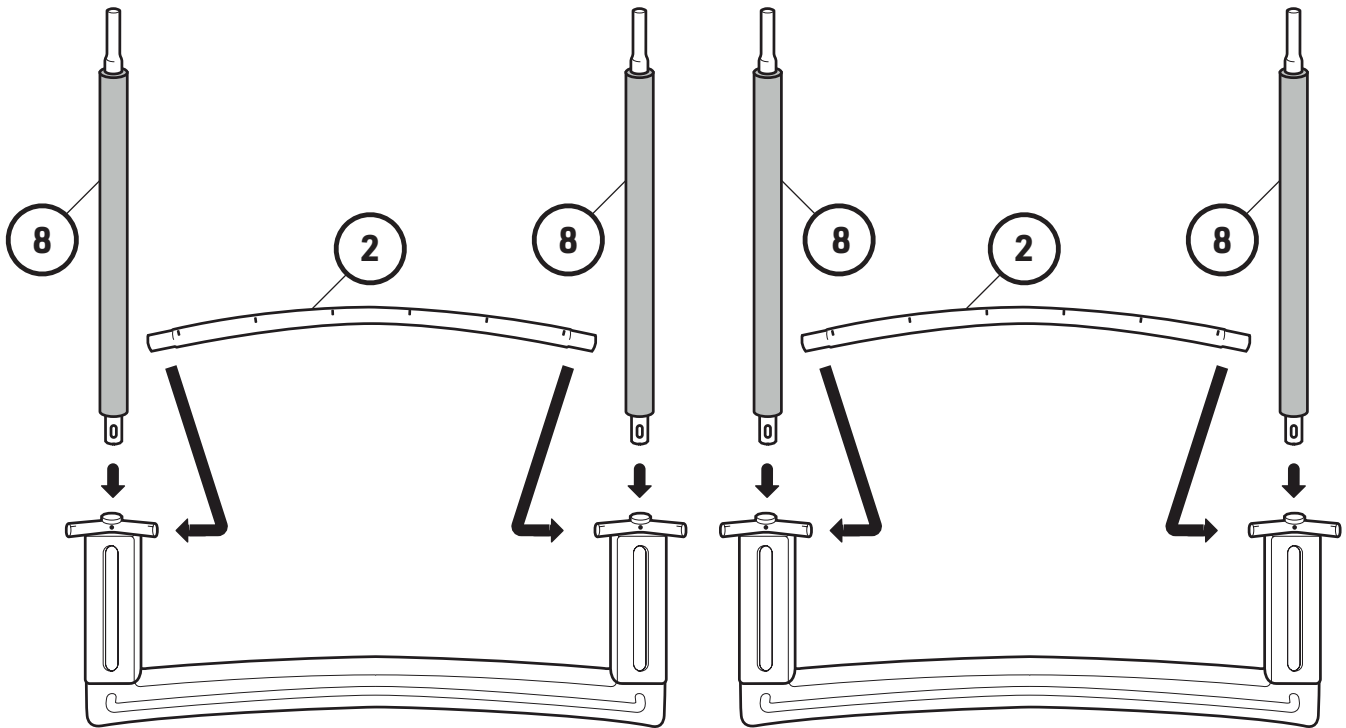

 
STEP 18

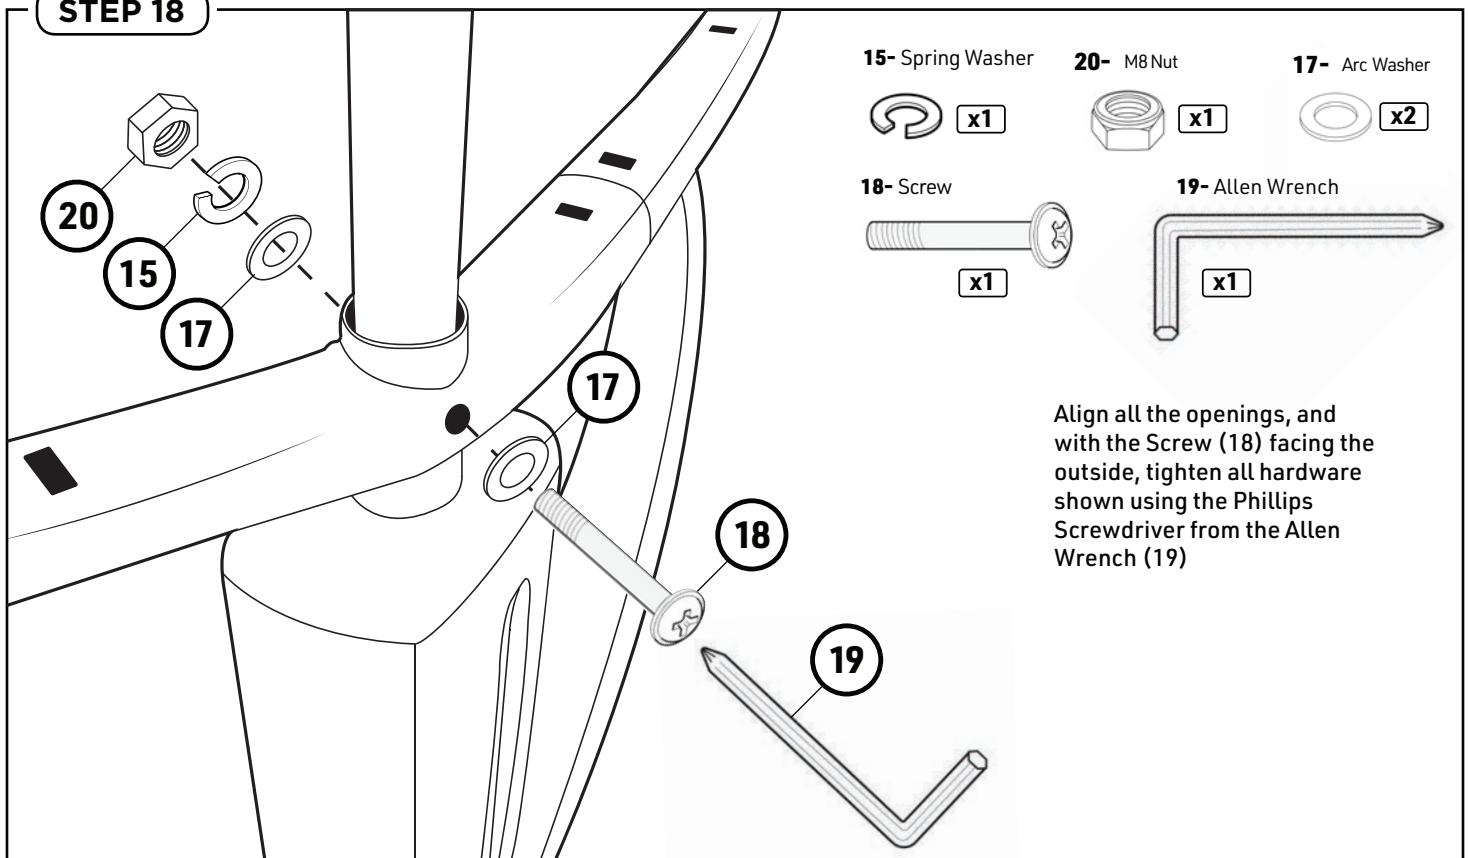

ASSEMBLY INSTRUCTIONS


STEP 19

 3 Completed Legs

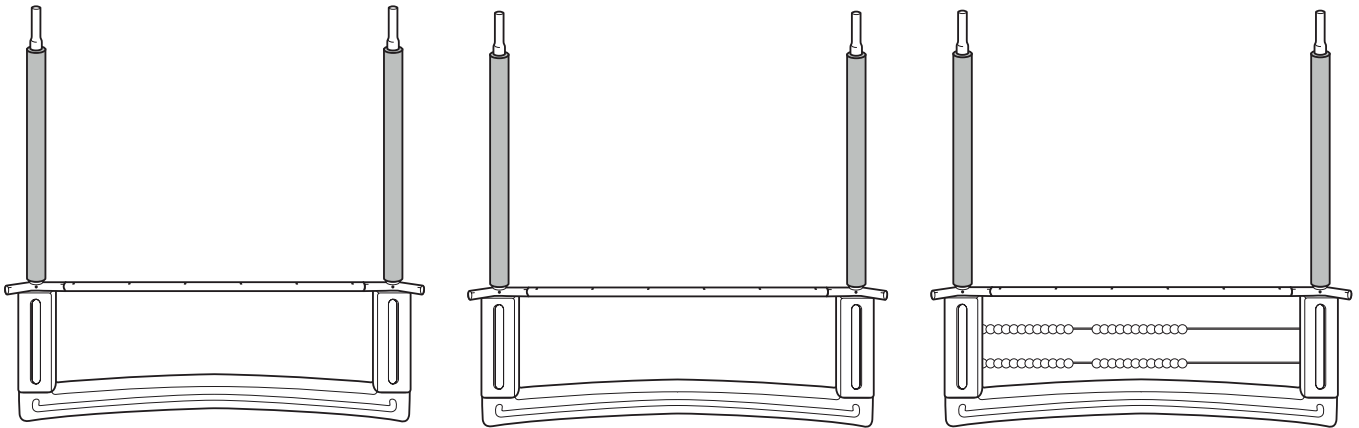


STEP 20

 Once you have 3 completed sections, slide the remainder of the Top Rails facing upwards to the legs of the trampoline.

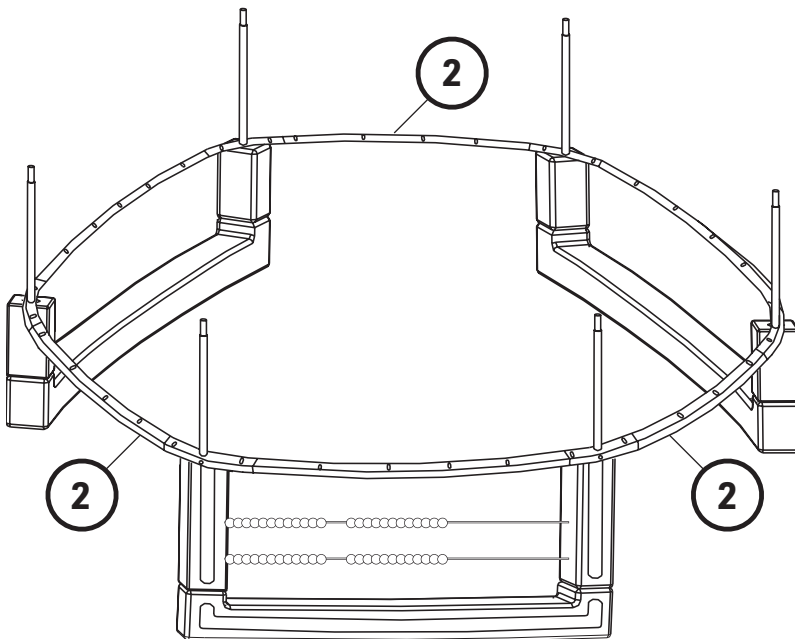

ASSEMBLY INSTRUCTIONS

 STEP 21

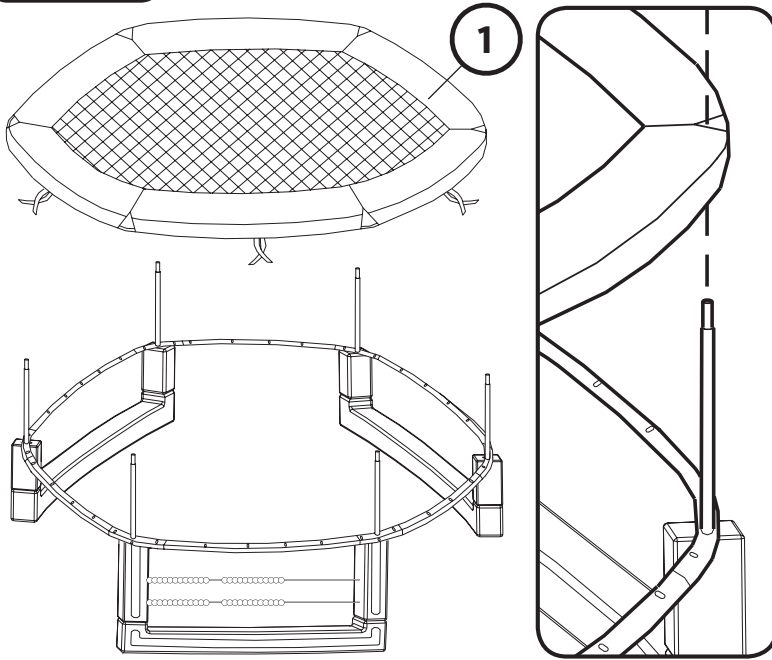


Place the Jump Mat and Frame Pad (1) with the Logo and Tic-Tac-Toe facing upwards.

Each corner of the Jump Mat and Frame Pad will have an opening. Slide the Straight Frame Tubes through these openings. The loop is elastic giving you enough give to stretch and insert.

Don't push the Mat all the way down, make sure to leave yourself a little room to install the springs to the mat.

STEP 22

 "R" Hook

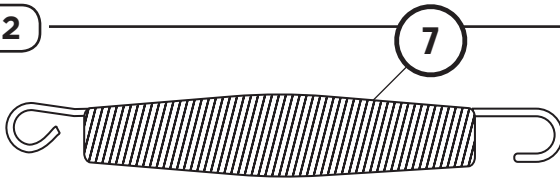


"C" Hook

Locate the R-Hook side of the Galvanized Spring (Part 7).

At the bottom of the trampoline there will be V-rings assigned to an opening of the Top Rail based on the proximity of each one.




Attach the Spring to the V-Ring using the "R"-Hook. Make sure the ends of the Springs are facing downwards to avoid punctures to the mat or injury while jumping on the trampoline.

 Using the Spring Loading Tool (Part 16) pull on the "C" Hook of the Galvanized Spring and hook to the closest Spring Opening of the Top Rail.

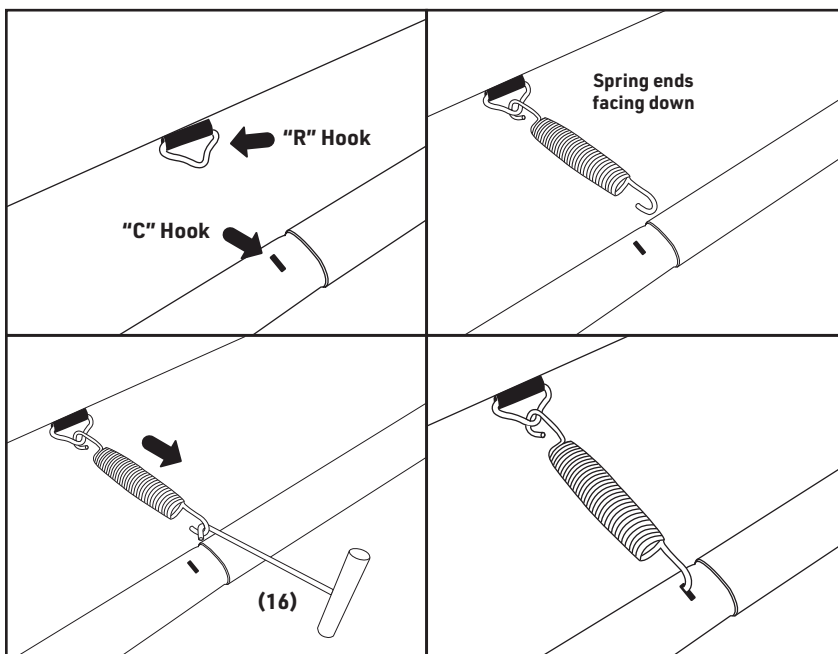

ASSEMBLY INSTRUCTIONS

   STEP 23

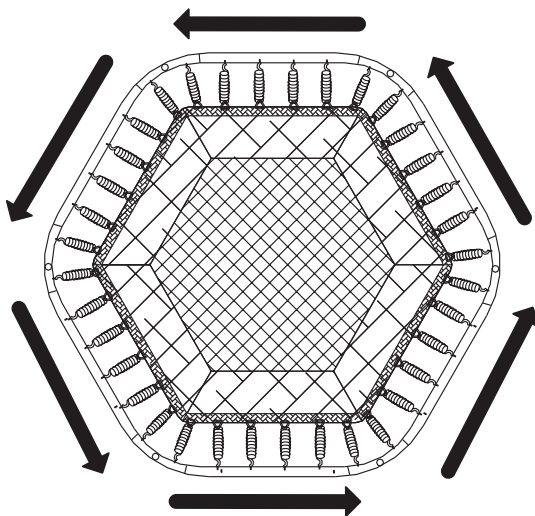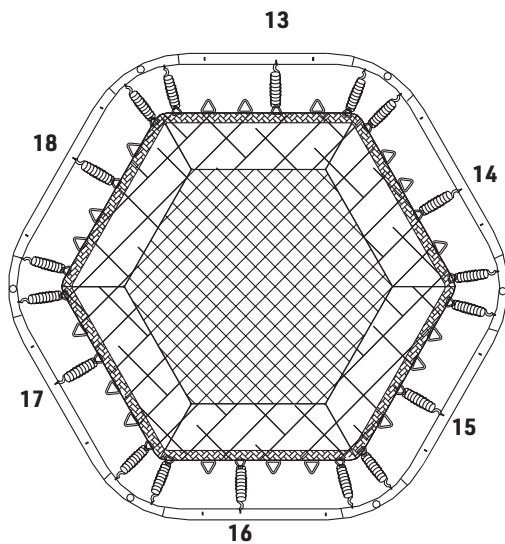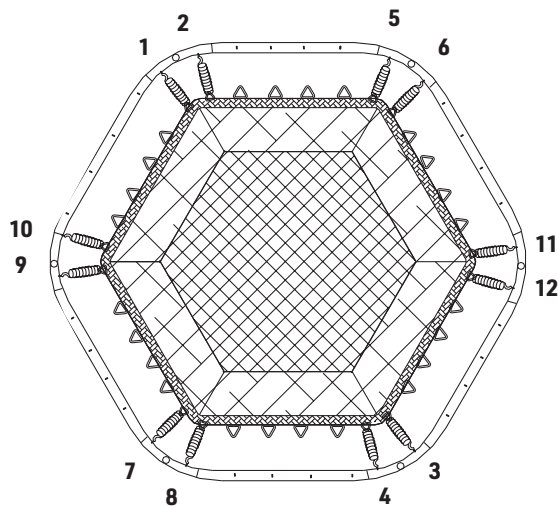

To ensure that Jump Mat and Frame Pad won't suffer from any excessive tension that will cause ripping or tearing on the Mat, the springs must be installed in a specific order.

 
Follow the Spring order shown for the best way to properly install and secure the Jump Mat and Frame Pad to the Top Rails.

Once the first 16 Springs have been installed on the Top Rail, install the remaining 20 Springs.

NOTE: Failure to install the springs to the correct V-Ring and Top Rail openings and/or not follow the Spring Order Installation as shown, may result in tearing or injury while in use.


ASSEMBLY INSTRUCTIONS

STEP 24

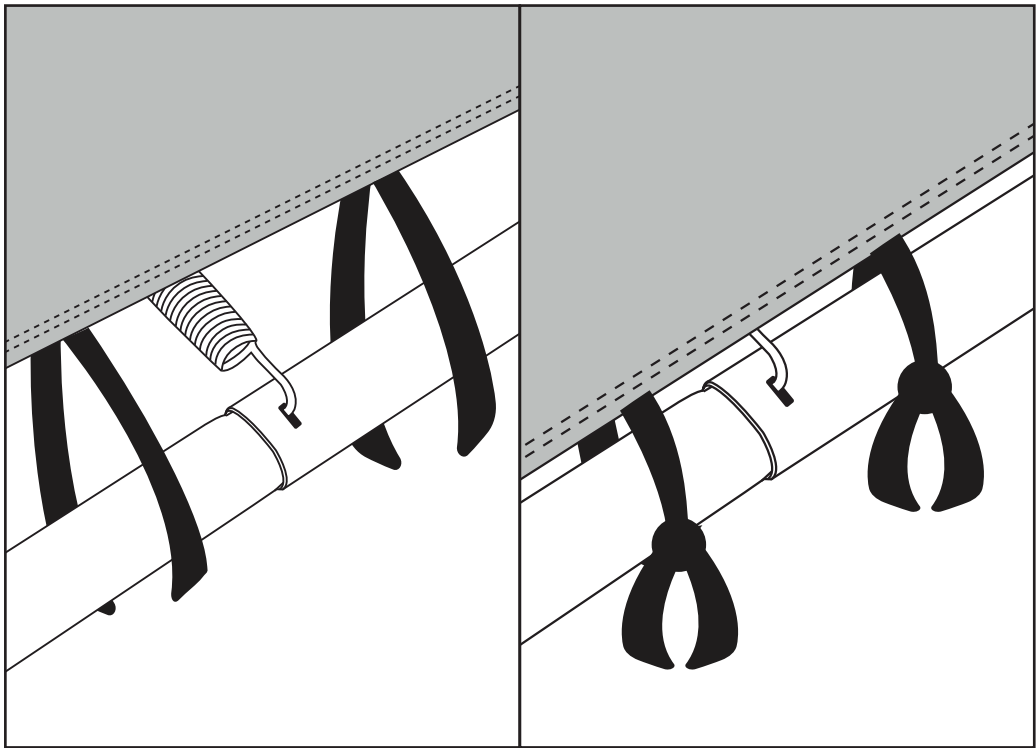

All ribbons must be attached and secured to the Top Rail to make sure no skipping, tearing, or loose jumping occurs

 
STEP 25

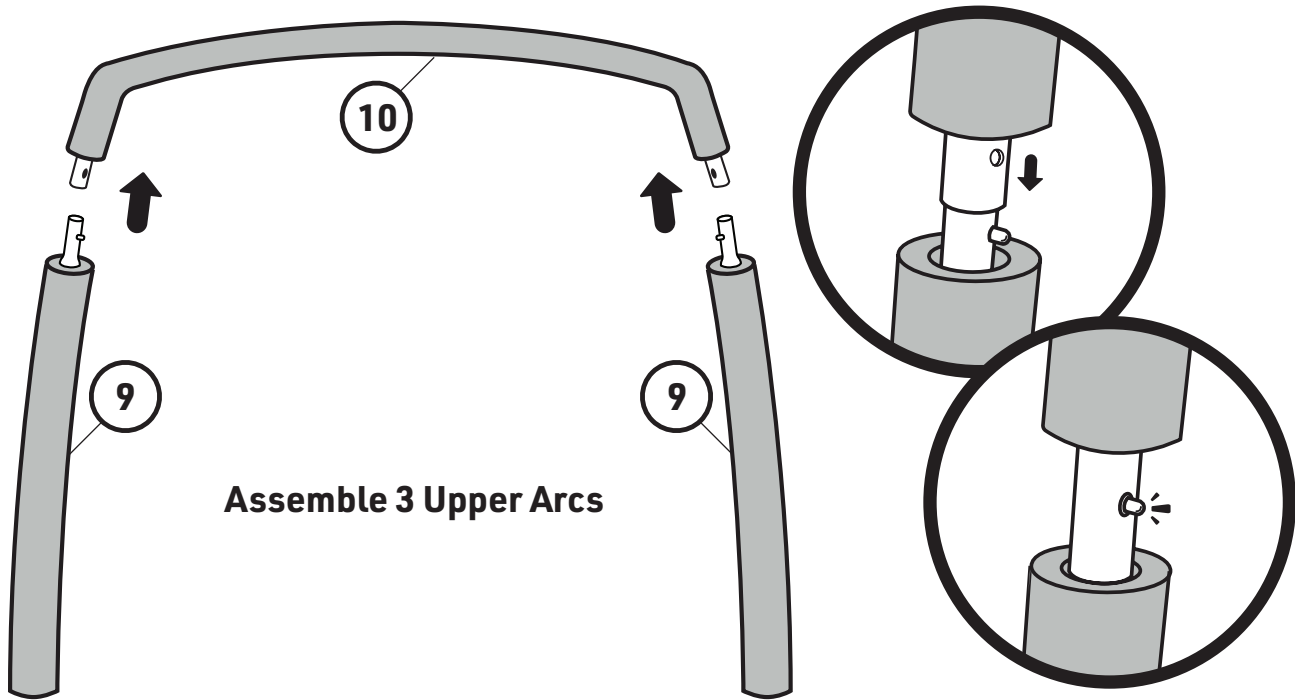

ASSEMBLY INSTRUCTIONS

STEP 26


 
3 Completed Upper Arcs

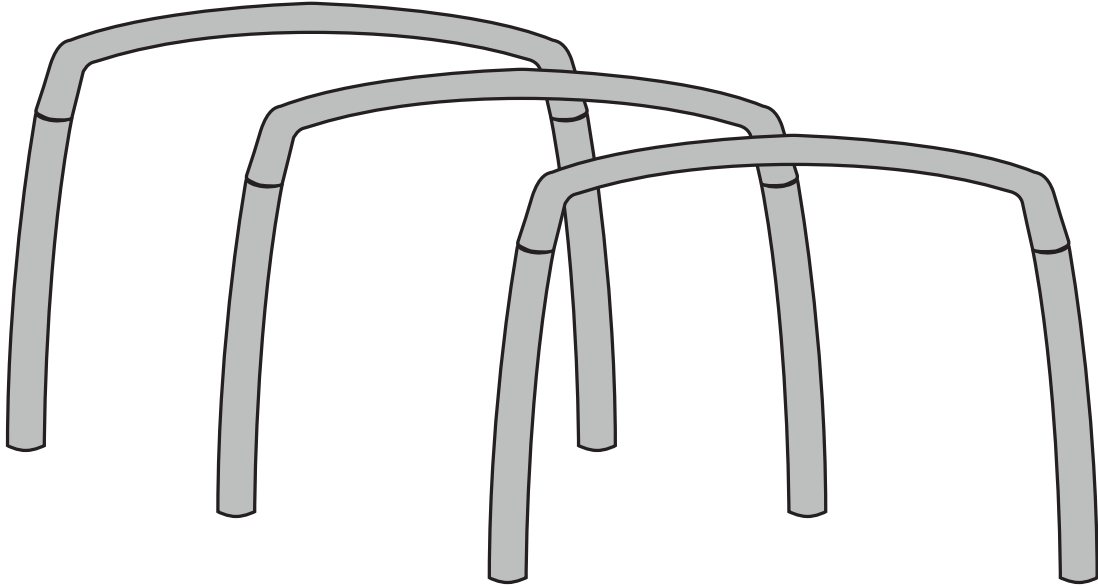

STEP 27

Slide all 3 completed upper arcs to the top section of the Curved enclosure poles

  NOTE: Make sure arcs are placed away from horizontal bases as shown.

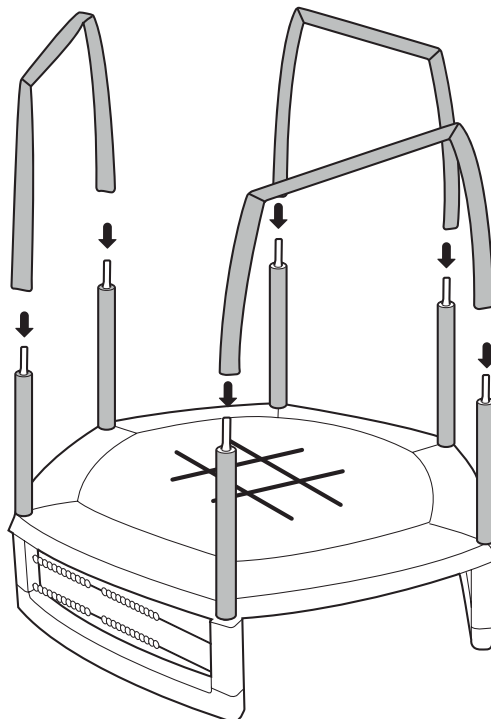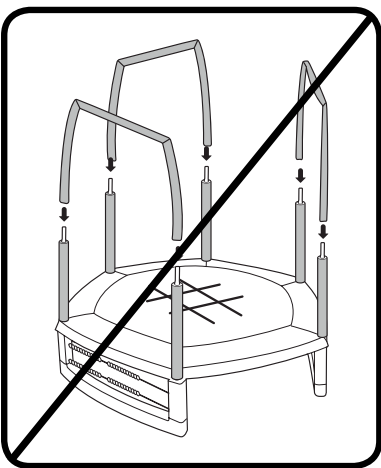


ASSEMBLY INSTRUCTIONS

STEP 28

Place the Enclosure Netting (11) on top of the trampoline making sure all arcs are inside.

 The zipper and safety buckle must be facing the outside of the trampoline.

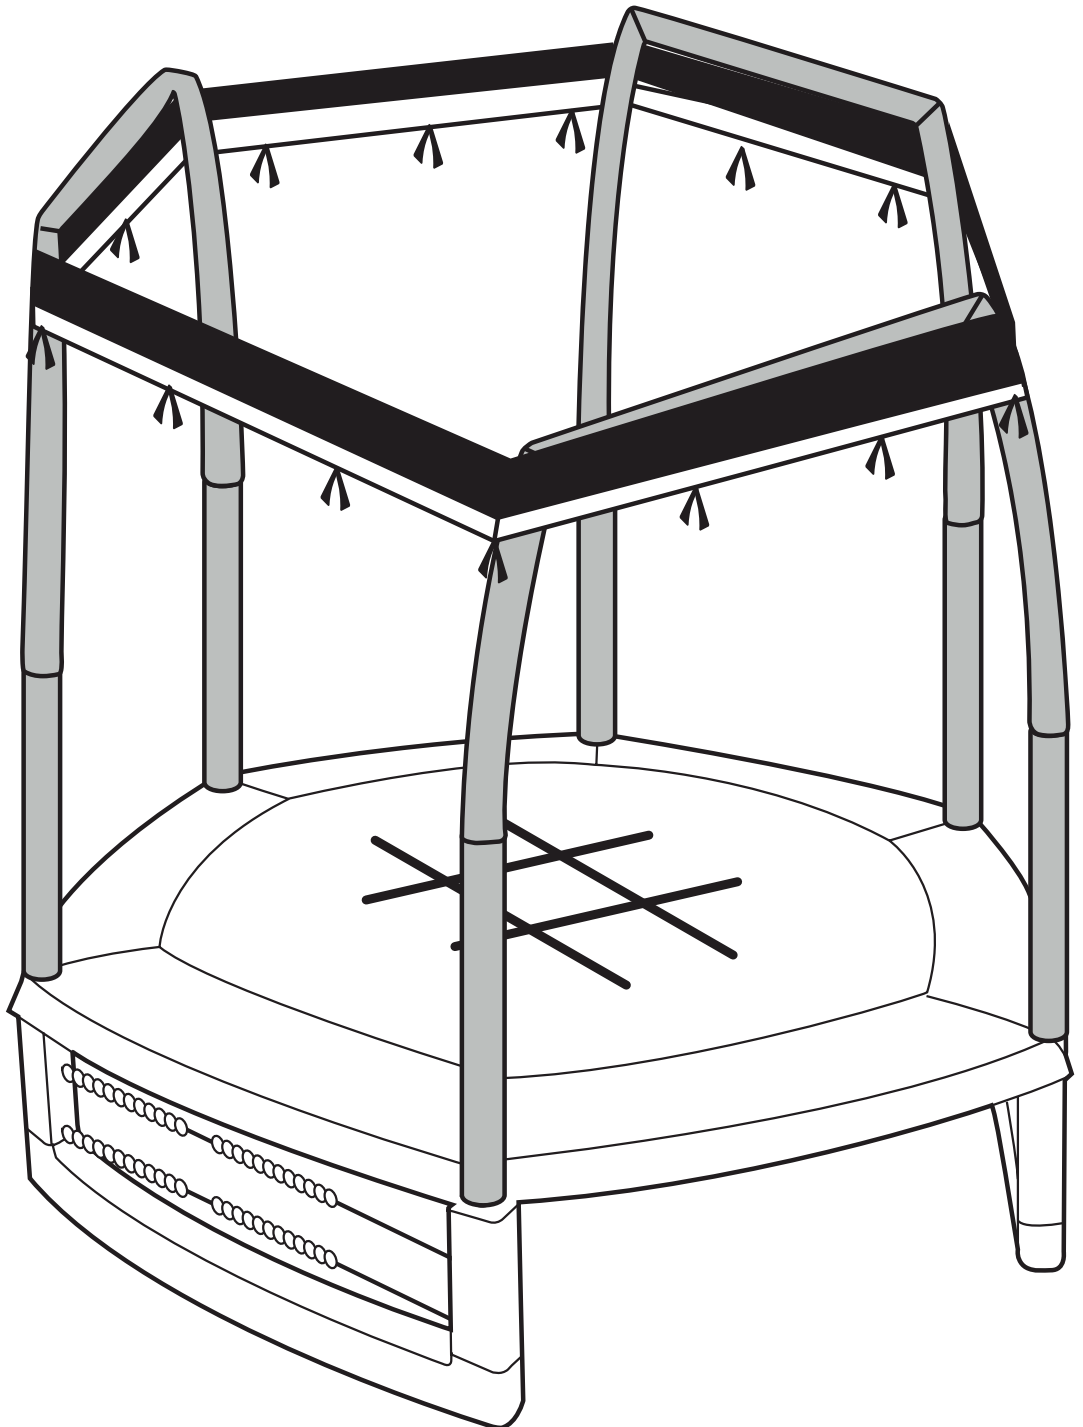


ASSEMBLY INSTRUCTIONS

STEP 29

Pull the Enclosure Netting all the way to the bottom of the trampoline mat.


Place all the hoods on top of the netting to each corresponding arc.

 Push the Velcro between both section to make sure the hood stays on top of the arc of the enclosure.

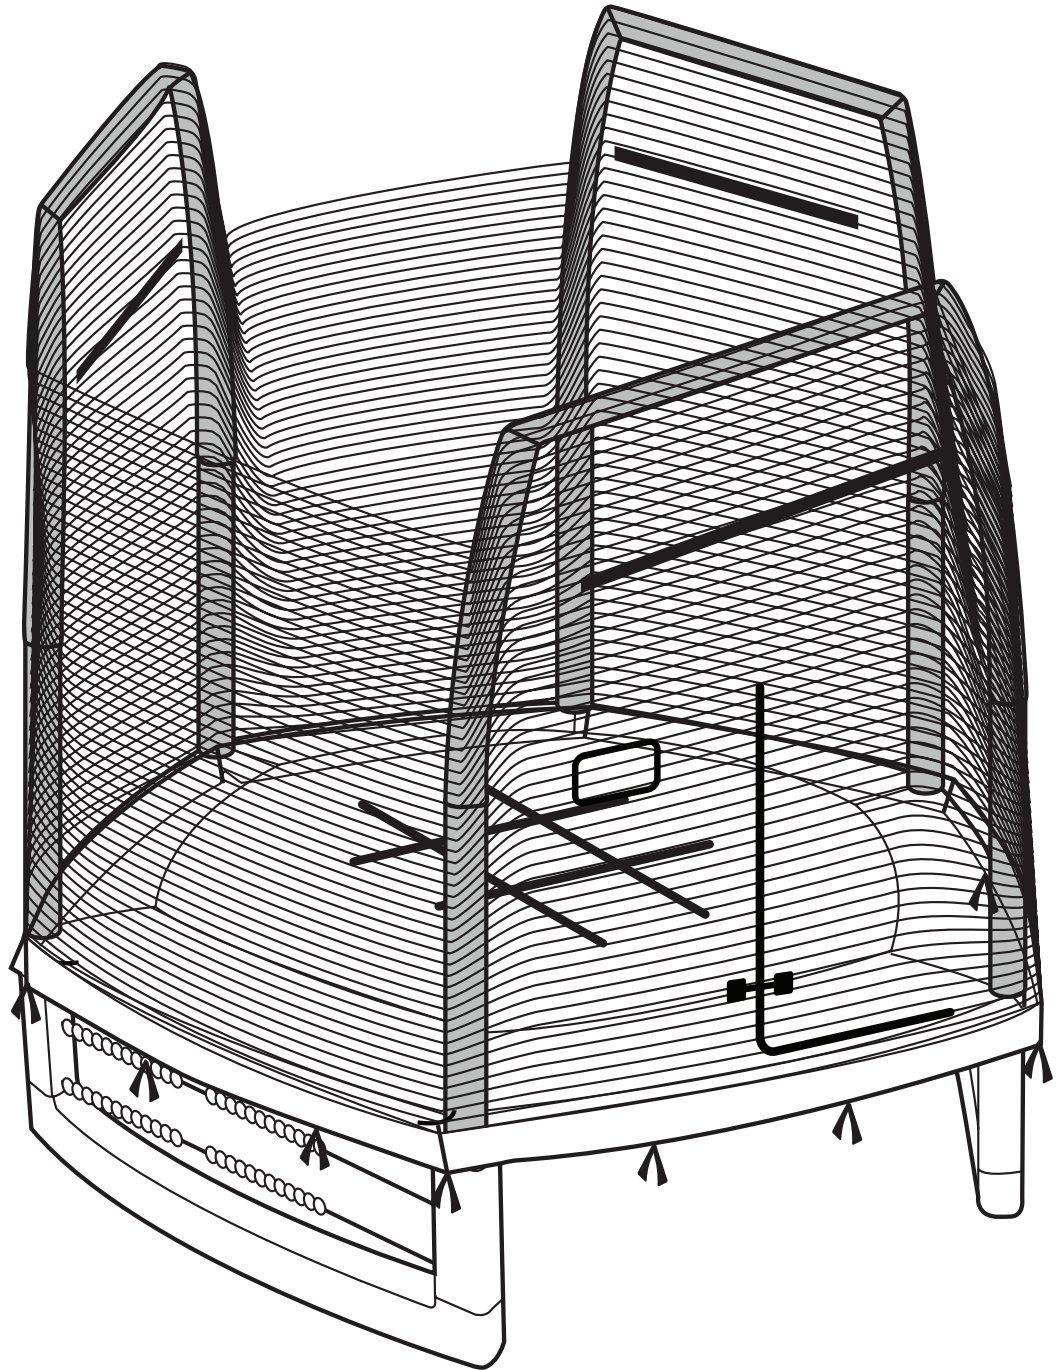


ASSEMBLY INSTRUCTIONS

 STEP 30

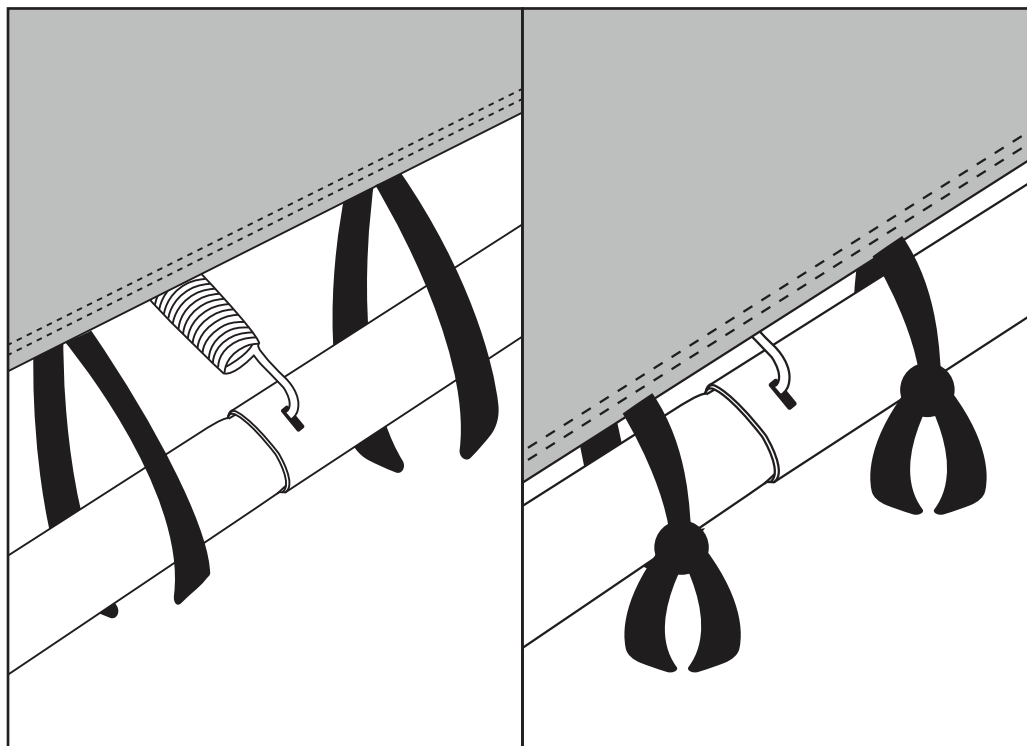

Secure on the bottom the Enclosure Ribbons to the Top Rail from the Safety Net

 STEP 31

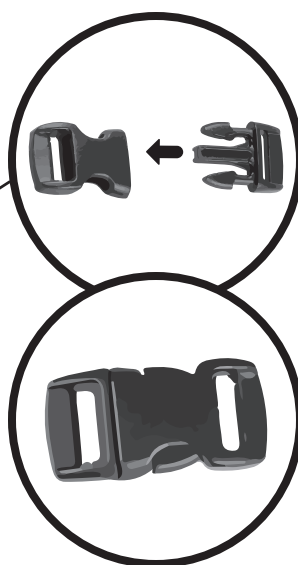

When the Trampoline is not in use, make sure to close the Enclosure Netting door by using the zippers.

For extra security, close the clasps from the outside as shown until the click.

 
ASSEMBLY INSTRUCTIONS

STEP 32



When the trampoline is not in use, make sure to store and put away the chalk in a dry and safe place.

Chalk is not resistant to rain or elements and will break if left untended.

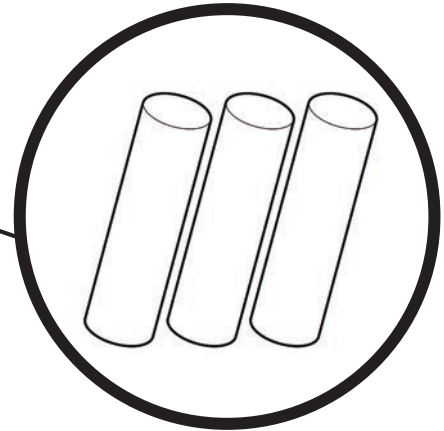

FREQUENTLY ASKED QUESTIONS

- Question: "The foam padding or mat is damaged, what should I do?"

Answer: If you are still within your warranty period (90 Days from initial purchase) you should contact customer service. You can also purchase replacement padding and mats at: www.PureFun.net

- Question: "I had a part missing from my box" or "something was damaged in shipping, can you send it to me?"

Answer: If it has been 30 days or less from the date of your initial purchase, you can contact customer service for a replacement part to be issued.

CARE & MAINTENANCE

- **IMPORTANT:** While no regular maintenance is required, you must inspect the trampoline before each use and replace any worn, defective, or missing parts.

The following conditions could represent potential hazards: Missing, improperly positioned, or insecurely attached frame padding; Punctures, frays, tears, or holes worn in the bed or frame padding; Deterioration in the stitching or fabric of the bed or frame padding; Broken or missing springs; A bent or broken frame; A sagging jump mat; or sharp protrusions on the frame or suspension system; Bent or broken enclosure poles; Missing or torn foam on the poles; Torn or ripped enclosure netting; Broken or fraying zipper in the enclosure opening. Cease using trampoline immediately and secure it against unauthorized use if any of these conditions are present.

- If any part of the trampoline frame requires cleaning, simply wipe with a damp cloth. (Do not jump on the trampoline after cleaning until completely dry).
- To clean chalk from mat, wipe down net with wet rag. Allow mat to fully dry before jumping.