

The air fryer oven will not turn on

Remaining odor

Dark smoke comes out

White smoke comes out

Foods are cooked unevenly

Flaking of non-stick coating

Error code appears on the display

- Make sure the power cord is securely plugged into the outlet.
- Make sure the oven door is closed properly.
- Plug in another appliance to the same plug to test the circuit.

The first few times you use your air fryer oven, you may notice a plastic smell. This is normal, non-toxic, and goes away quickly. It is recommended to clean and preheat at 400°F for 15 minutes to remove any remaining odor.

- Immediately stop cooking and unplug the oven. Allow it to cool to room temperature.
- Remove all accessories from the cooking chamber and clean the area as well as all accessories thoroughly.

- Cooking greasy foods will cause oil to leak into the drip pan. This oil will produce white smoke. Try not to air fry foods with a high fat content.
- Make sure the drip pan and the inside are cleaned properly and not greasy after each use.

For more even browning and crispiness, toss ingredients or turn the tray 180° halfway through cooking cycle.

Clean the cooking tray and drip pan with moderate detergent and a slightly moist, non-abrasive sponge or cloth.

E2 - Open circuit in thermal sensor
E4 - Short circuit in thermal sensor

Unplug it from the power source and contact TaoTronics Customer Support.

WARRANTY AND SERVICE

Thanks for choosing TaoTronics Air Fryer Oven.

This product is covered with TaoTronics product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by TaoTronics.

We can only provide after sales service for products that are sold by TaoTronics or TaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

✂ **Please have your invoice and order ID ready before contacting Customer Support.**

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at

support@taotronics.com 🔍